


**Einbauanleitung Elektrosatz  
Anhängervorrichtung mit 12-N Steckdose  
lt. DIN/ISO Norm 1724**

**Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme  
DIN/ISO 1724 prise 12-N**


**Fitting instructions electric wiringkit  
towbar with 12-N socket up to  
DIN/ISO norm 1724**

**Montage-handleiding elektrokabelset voor  
trekhaak met 12-N contactdoos  
vlg. DIN/ISO norm 1724**











**Instrucciones de montaje de juego de cables  
eléctricos para gancho de remolque con  
caja de conexiones 12-N según  
norma DIN/ISO 1724**

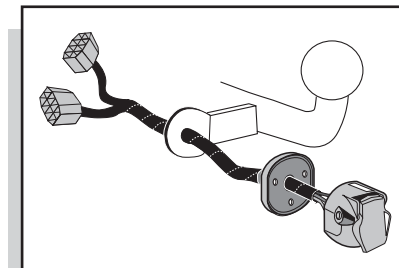



## FORD MONDEO SEDAN 2001-

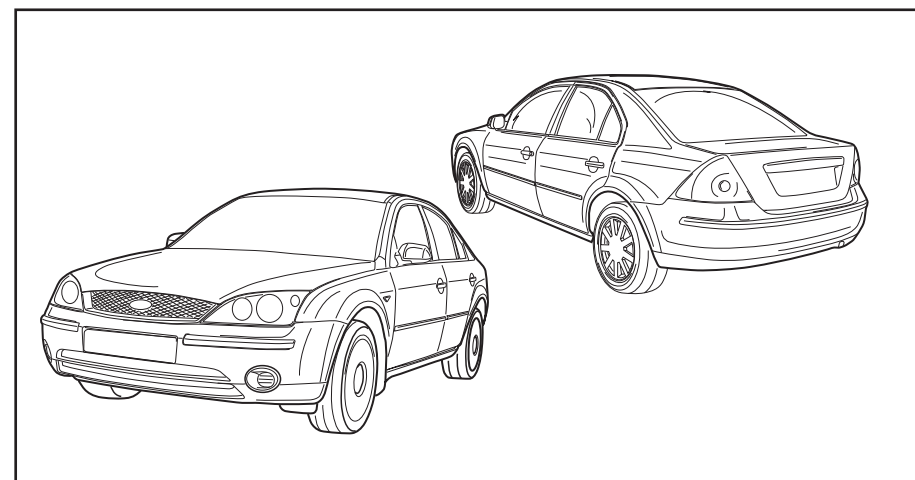


Bestel Nr.: FR-010-BB

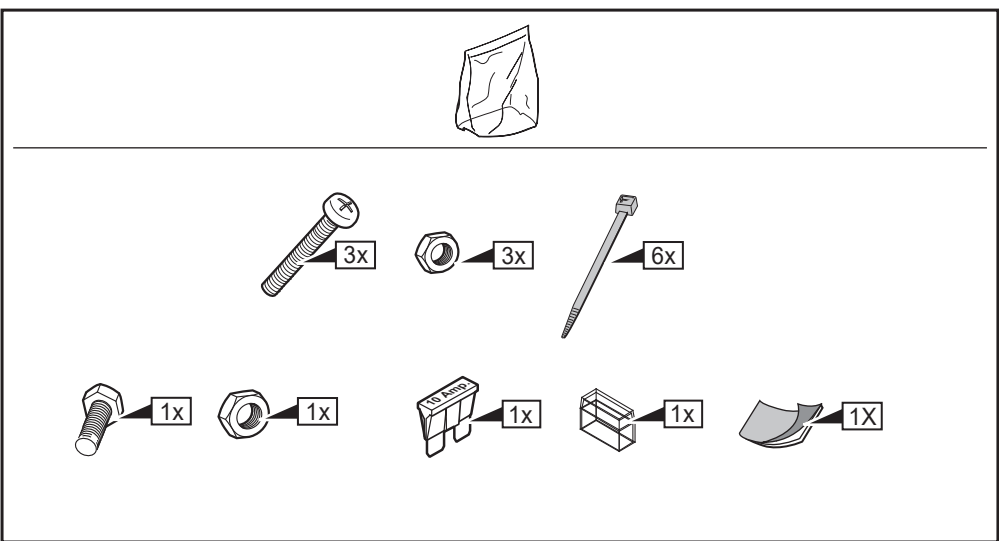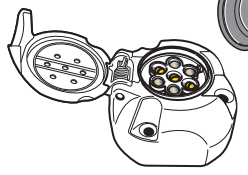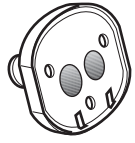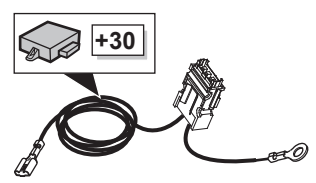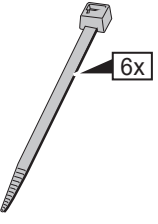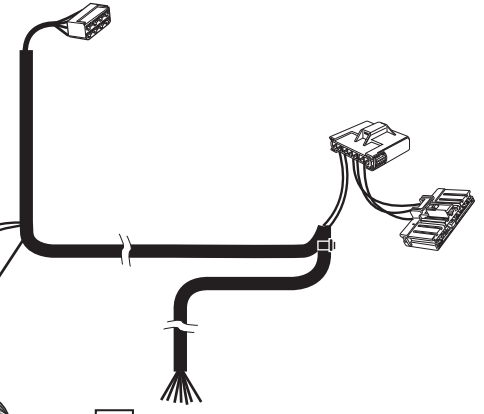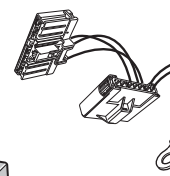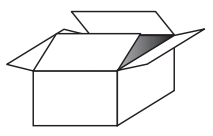


**1 HATCHBACK + SEDAN**

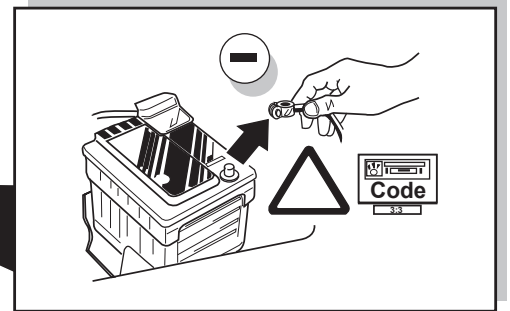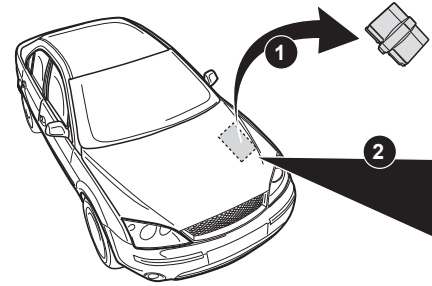


**2**

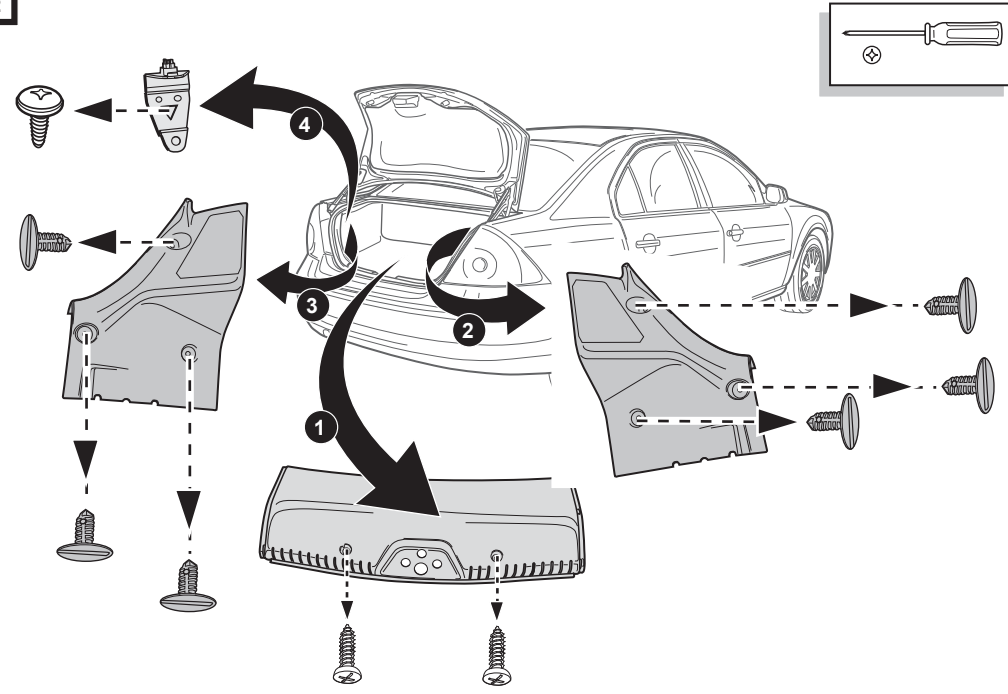


**3**

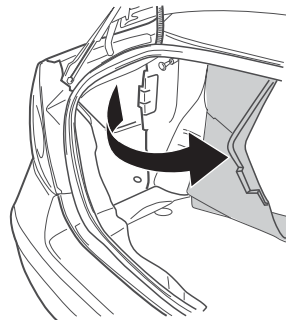


**4**

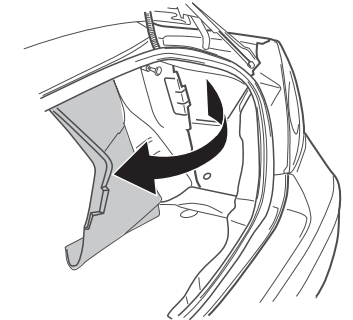


**INFO**

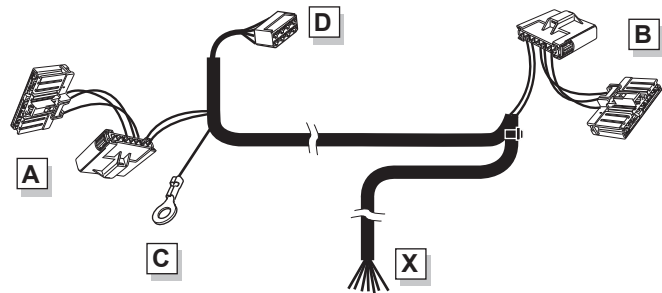


**ROUTING**

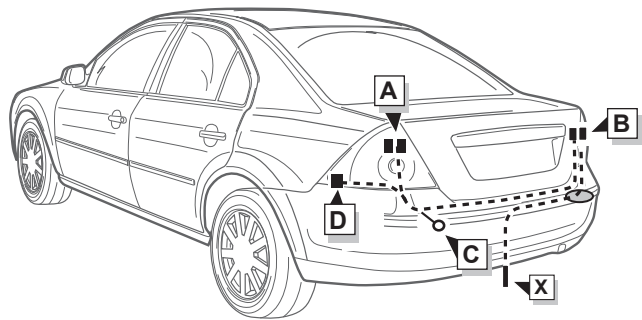


5

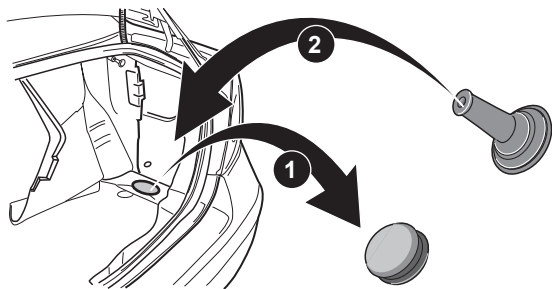


6



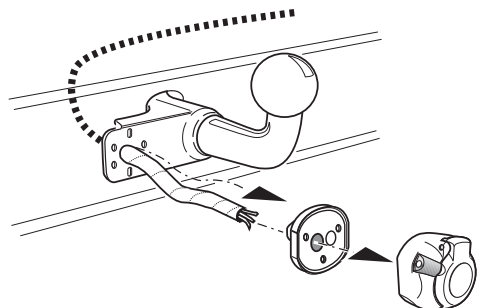


24

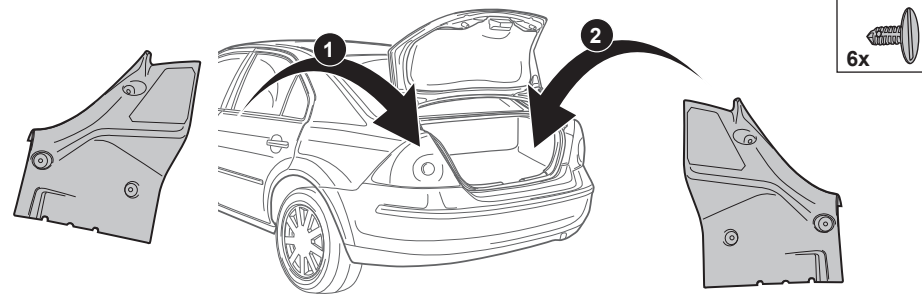





25

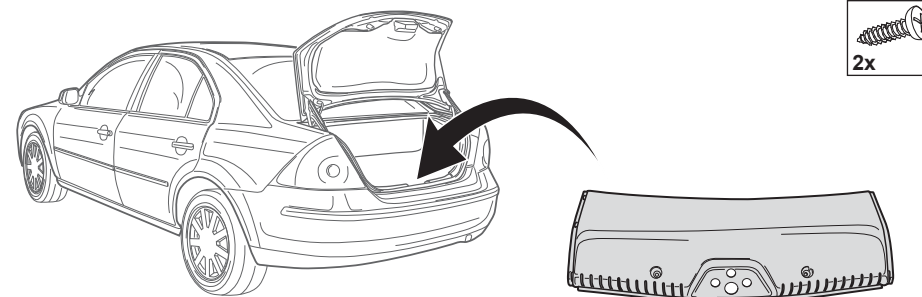

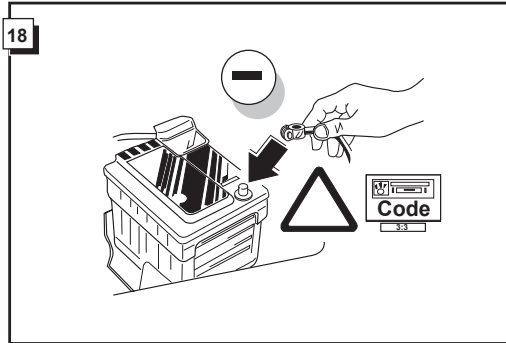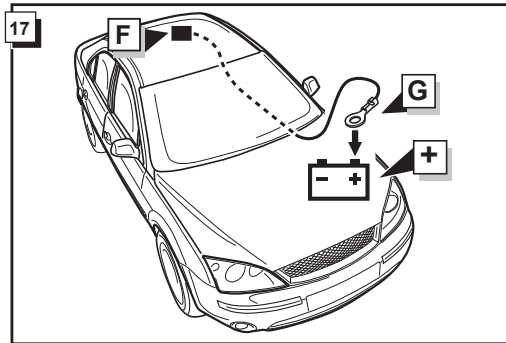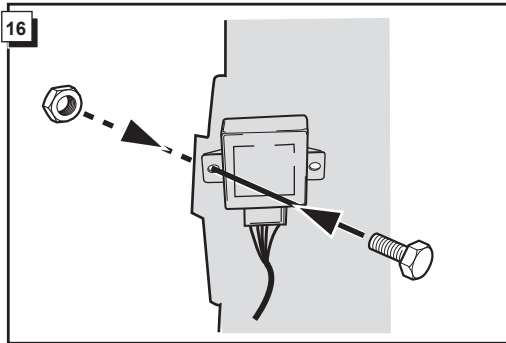

19

**! FUNKTIONEN KONTROLLIEREN !  
 CONTRÔLER LES FONCTIONS !  
 CHECK FUNCTIONS !  
 CONTROLEER FUNCTIES !  
 CONTROLA LOS FUNCIONES!**

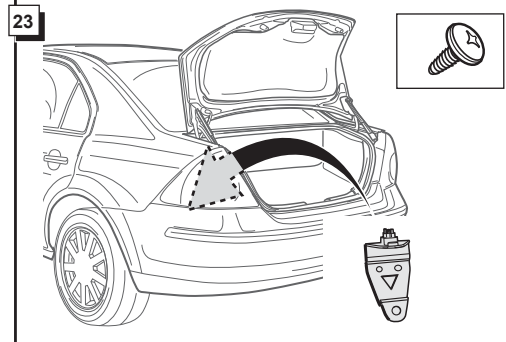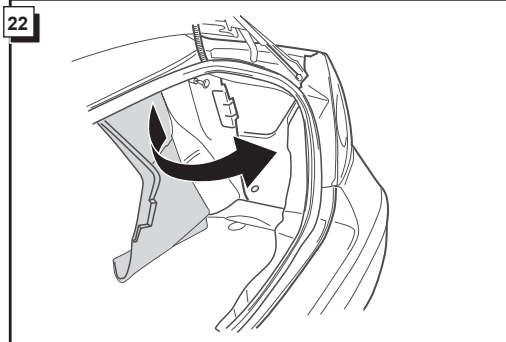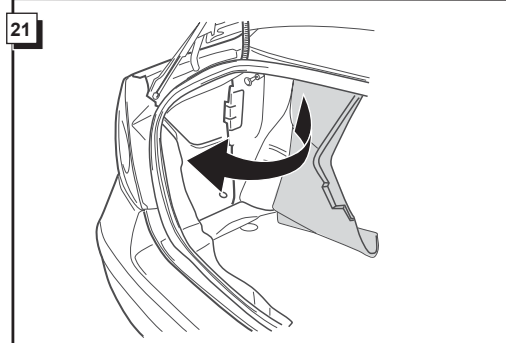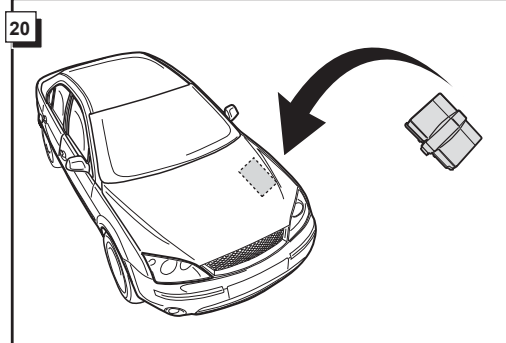

INFO

**Anschluß Steckdose / Connection de la prise / Socket connection  
 Contactdoos aansluiting / Conexión del caja de enchufe**

DIN/ISO 1724		D	F	GB	NL	ES	
	1/L	gelb	jaune	yellow	geel	Amarillo	
	2	blau	bleu	blue	blauw	Azul	
	1-8	3/31	weiß	blanc	white	wit	Blanco
	4/R	grün	vert	green	groen	Verde	
	5/58-R	braun	marron	brown	bruin	Marrón	
	6/54	rot	rouge	red	rood	Rojo	
	7/58-L	schwarz	noir	black	zwart	Negro	
	8/58-b	grau	gris	grey	grijs	Gris	

