

**Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724**

HY-017-BB

171103N

**Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 1724 prise 12-N**


**Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724**

**Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlg. DIN/ISO norm 1724**


**Instrucciones de montaje de kit eléctrico para
enganche de remolque con caja de conexiones
12-N según norma DIN/ISO 1724**

**Istruzioni di montaggio di set di cavi elettrici per
gancio da traino con zoccolo a 12-N conforme alla
norma DIN/ISO 1724**

**Monteringsanvisningar elkabelsats för dragkrok
med 12-N kontaktdosa enligt DIN/ISO norm 1724**







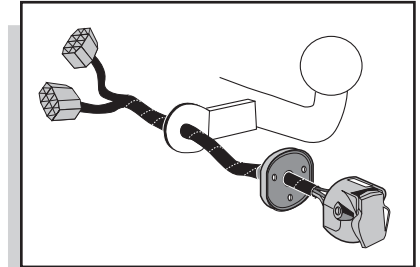





HYUNDAI SANTA FE 2001-




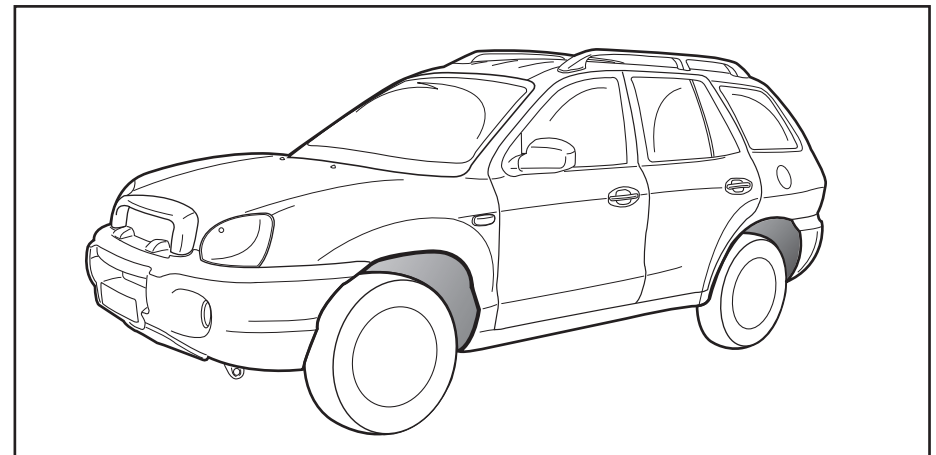


Bestel Nr.: HY-017-BB


*Einzelteilliste *Liste de pieces *Part list *Onderdelenlijst
*Lista de componentes *Elenco componenti *Dellista

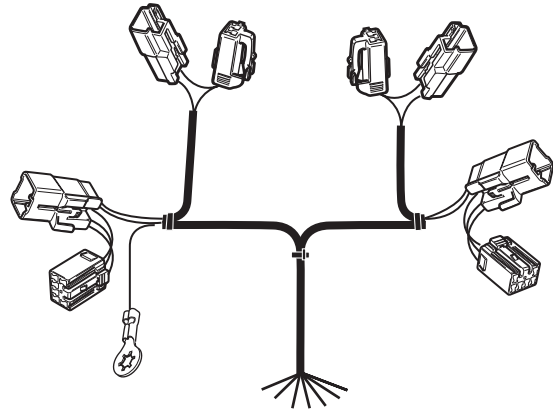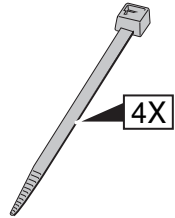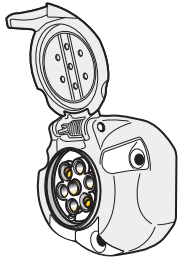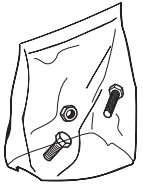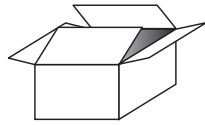

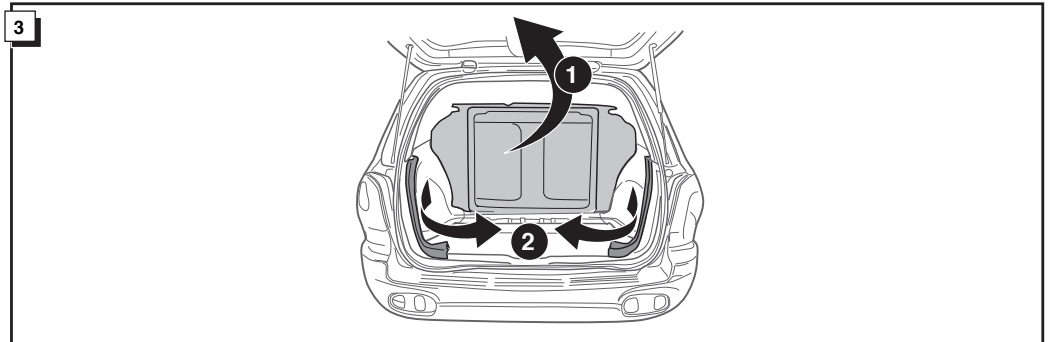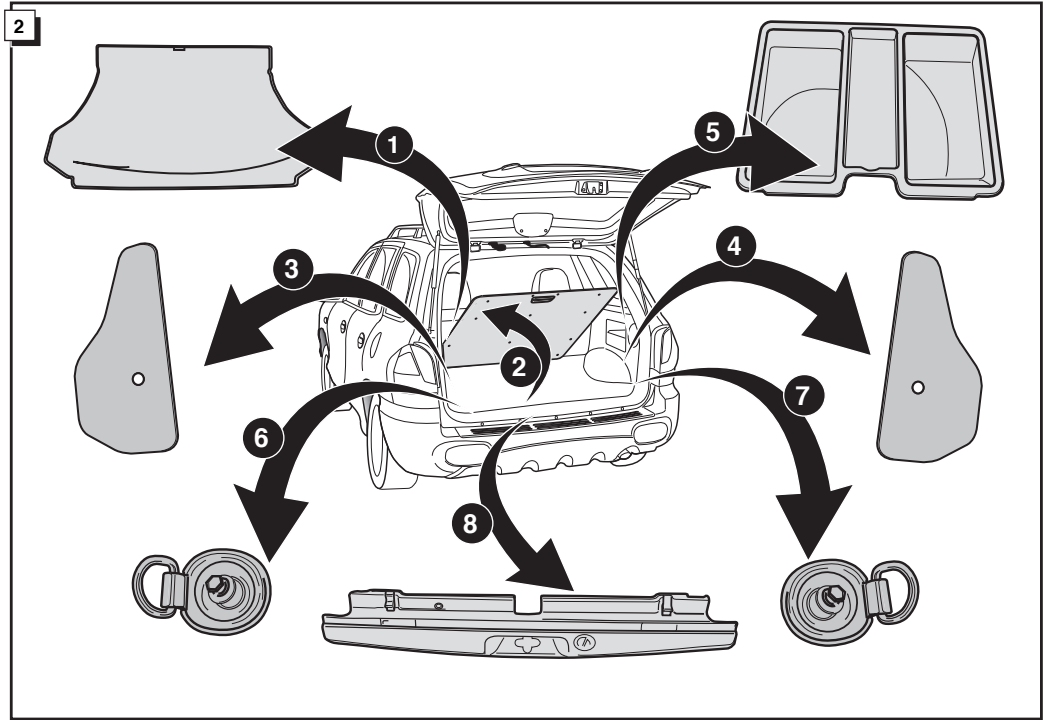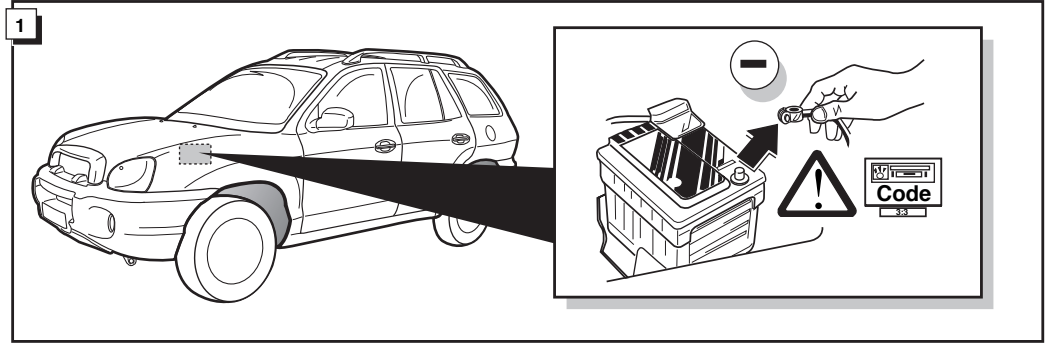


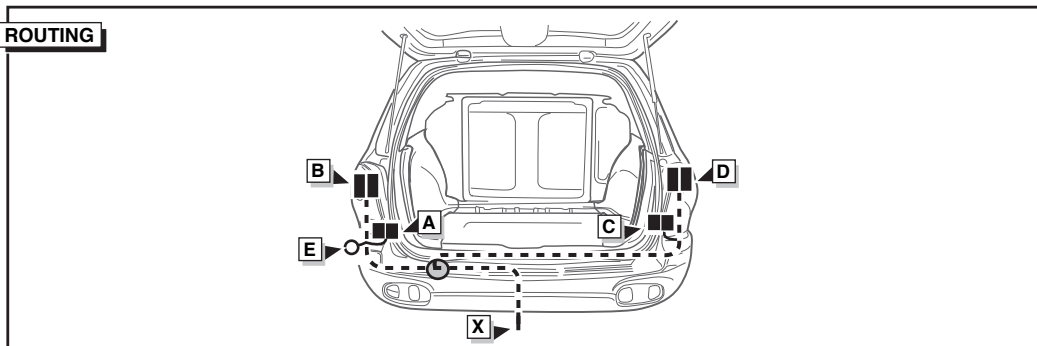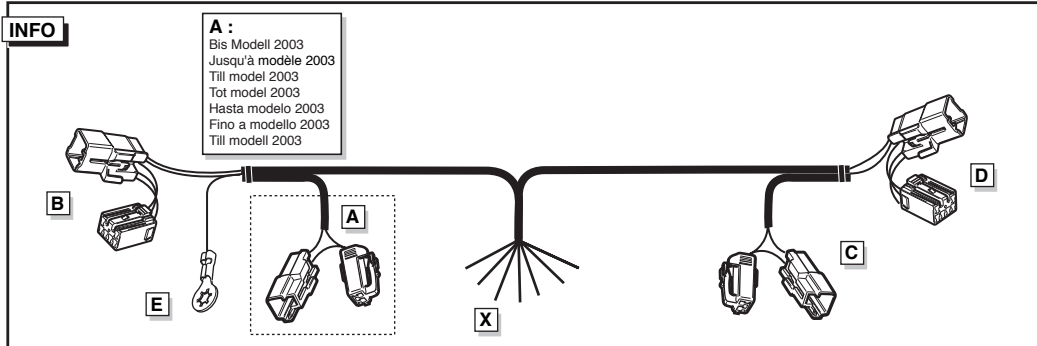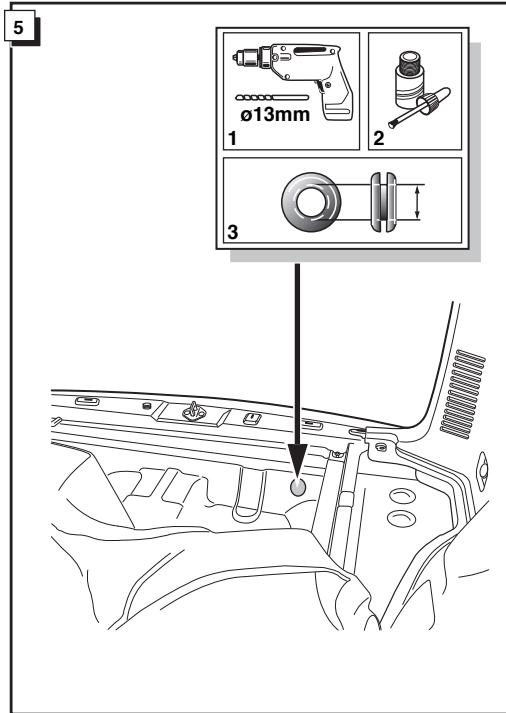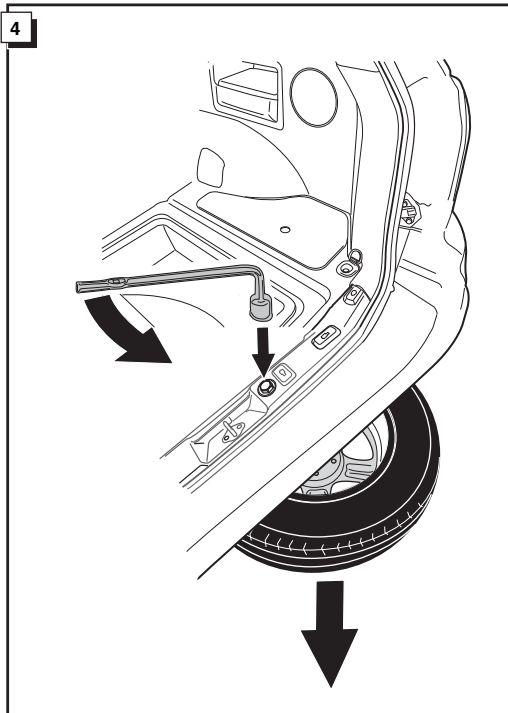

14

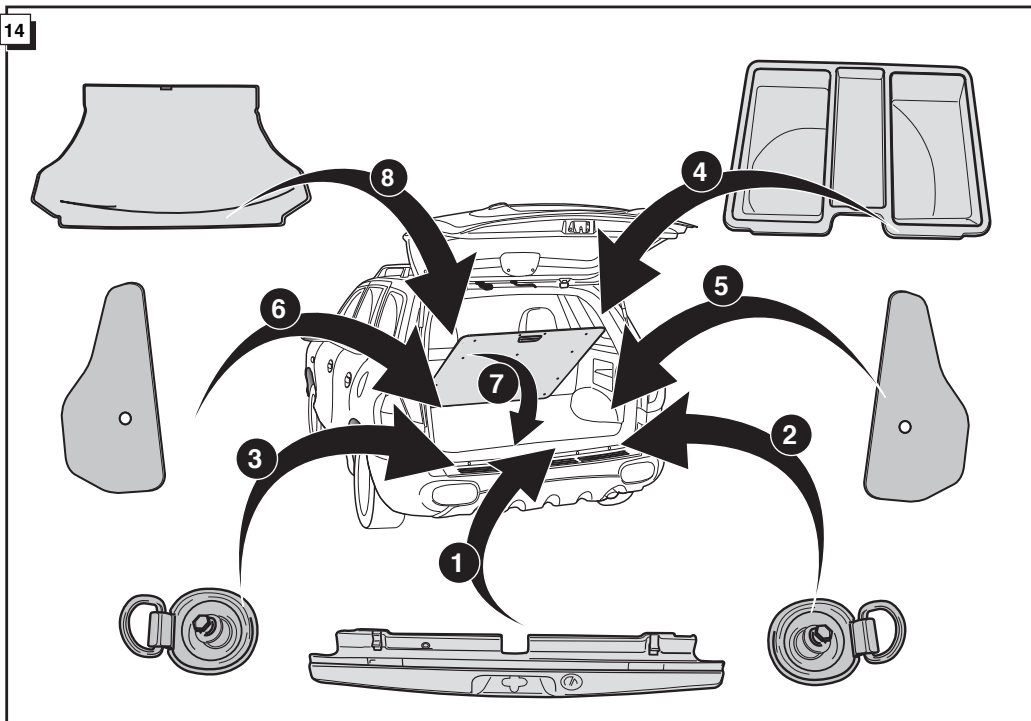

6

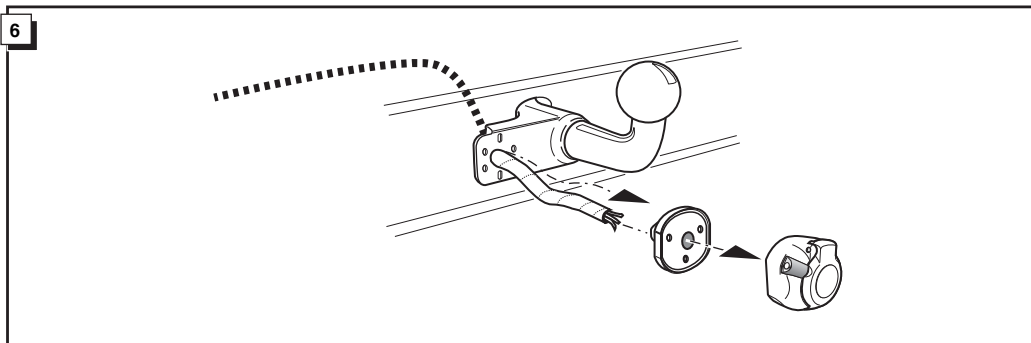


INFO


Anschluss Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting
 Conexión de la caja de enchufe / Allaccio zoccolo / Anslutning kontaktdosa

| INFO | | | | | | | | |
|--------------|--------|---------|--------|--------|-------|----------|---------|-------|
| DIN/ISO 1724 | | DE | FR | GB | NL | ES | IT | SE |
| ← | 1/L | gelb | jaune | yellow | geel | amarillo | giallo | gul |
| ⚡ | 2 | blau | bleu | blue | blauw | azul | blu | blå |
| ⚡ 1-8 | 3/31 | weiß | blanc | white | wit | blanco | bianco | vit |
| → | 4/R | grün | vert | green | groen | verde | verde | grön |
| ☀ | 5/58-R | braun | marron | brown | bruin | marrón | marrone | brun |
| STOP | 6/54 | rot | rouge | red | rood | rojo | rosso | röd |
| ☀ | 7/58-L | schwarz | noir | black | zwart | negro | nero | svart |
| ⚡ → ⚡ | 8/58-b | grau | gris | grey | grijs | gris | grigio | grå |




7

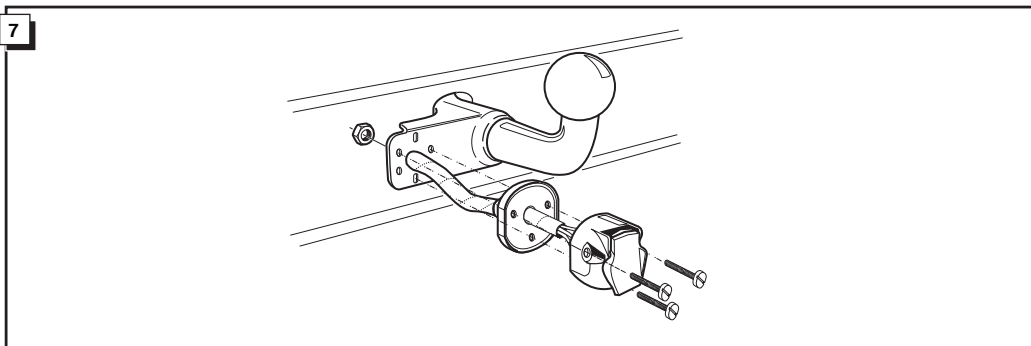



8

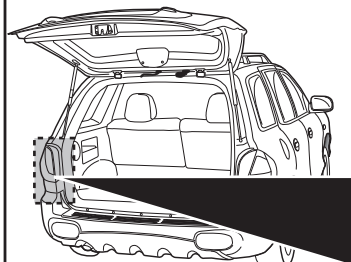


A :
 Bis Modell 2003
 Jusqu'à modèle 2003
 Till model 2003
 Tot model 2003
 Hasta modelo 2003
 Fino a modello 2003
 Till modell 2003

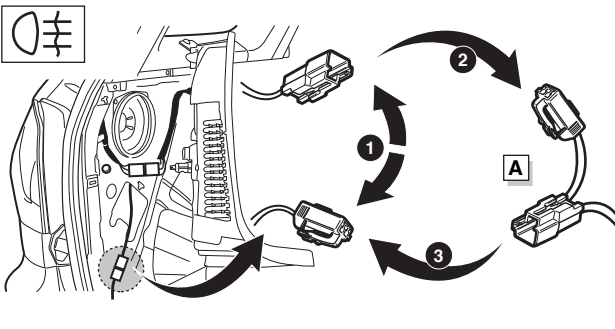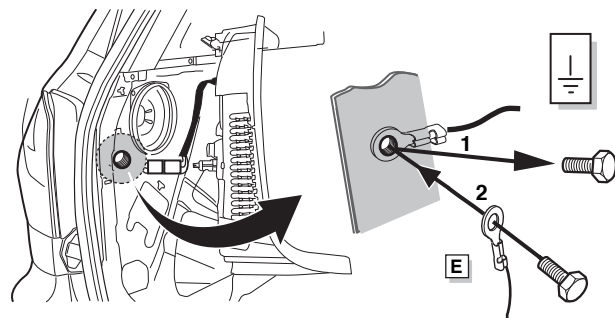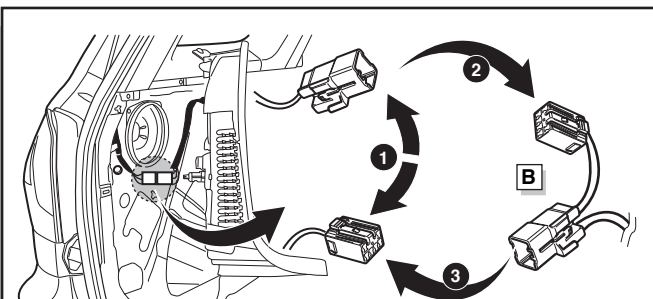

10

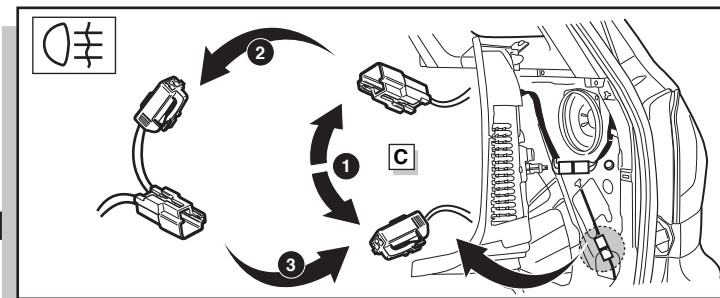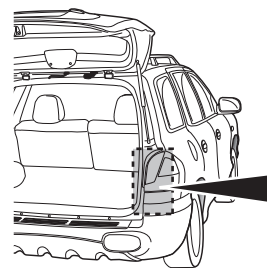



11

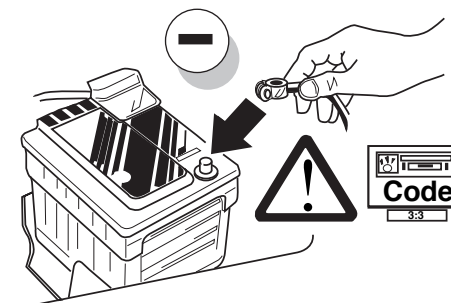

12

! FUNKTIONEN KONTROLLIEREN !
CONTRÔLER LES FONCTIONS !
CHECK FUNCTIONS !
CONTROLEER FUNCTIES !
¡ CONTROLAR FUNCIONES !
CONTROLLA FUNZIONI !
KONTROLLERA FUNKTIONERNA !

9

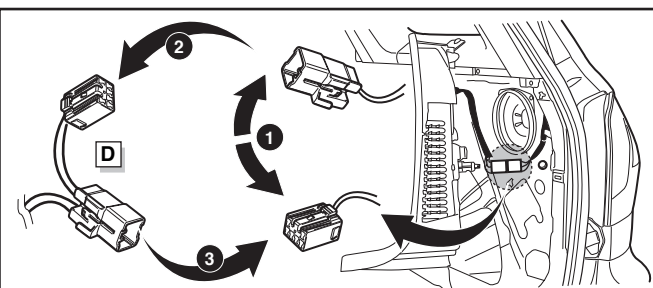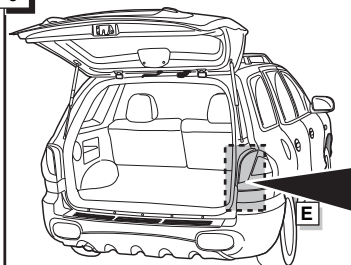

13

