


Montage-handleiding elektrokabelset voor  
trekhaak met 12-N contactdoos  
vlg. DIN/ISO norm 1724


Fitting instructions electric wiringkit  
towbar with 12-N socket up to  
DIN/ISO norm 1724

Einbauanleitung Elektrosatz  
Anhängervorrichtung mit 12-N Steckdose  
lt. DIN/ISO Norm 1724

Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme DIN/ISO 1724  
prise 12-N

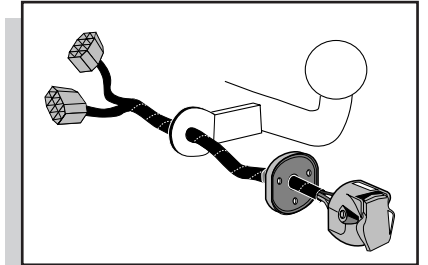

## MERCEDES W202 / S202

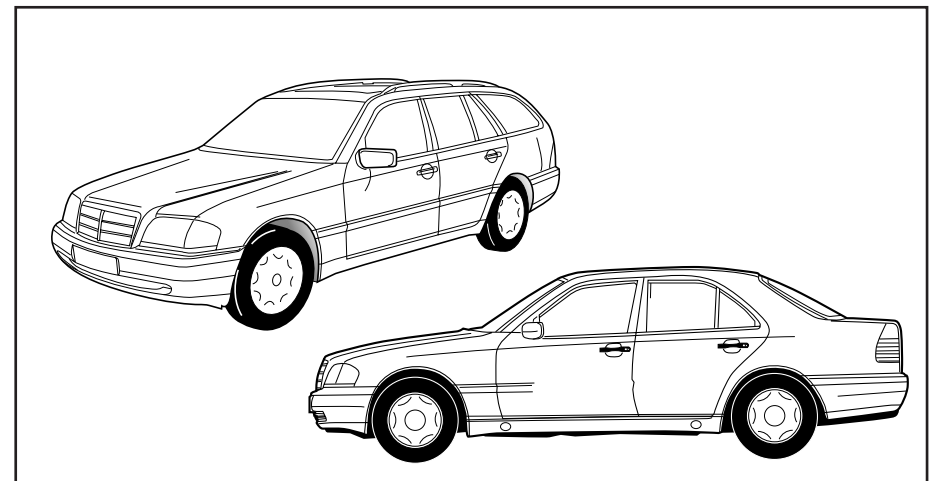













Bestel Nr.: MB-024-B




\* Teilliste

\* Liste de pieces





\* Part list

\* Onderdelenlijst

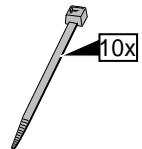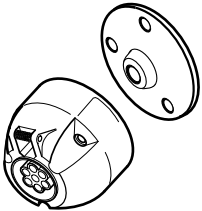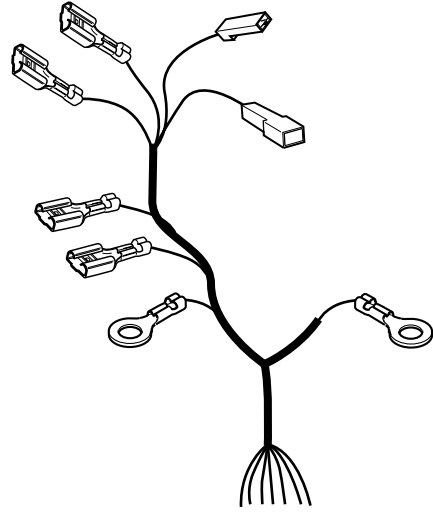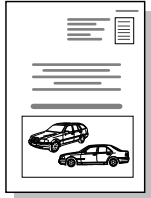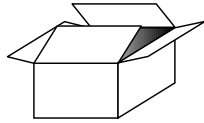






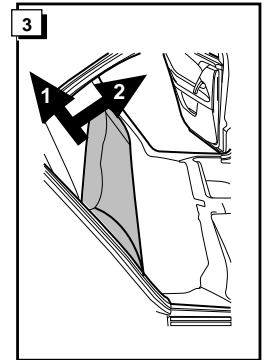
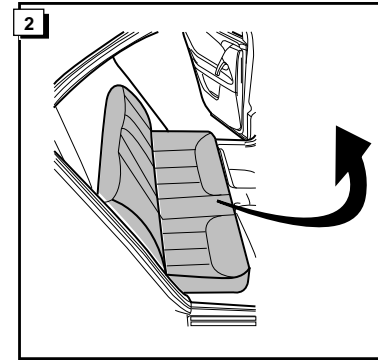
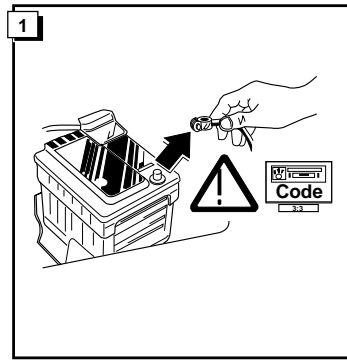







**W202**

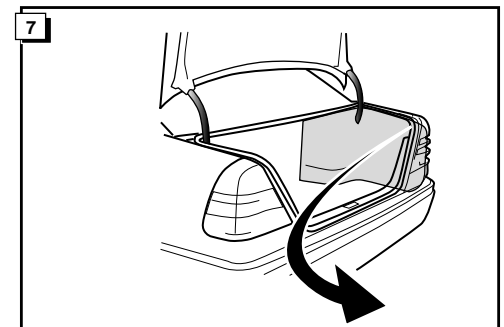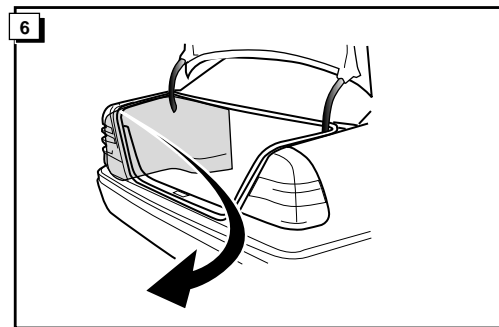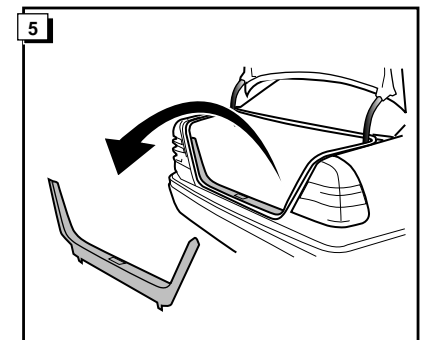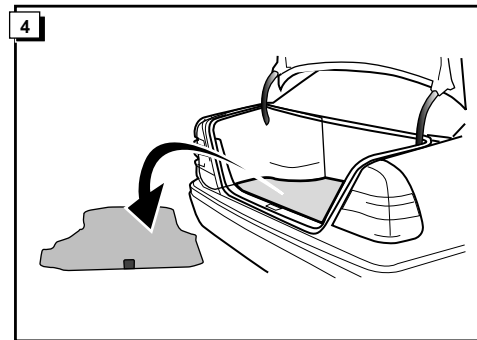

**S 202**

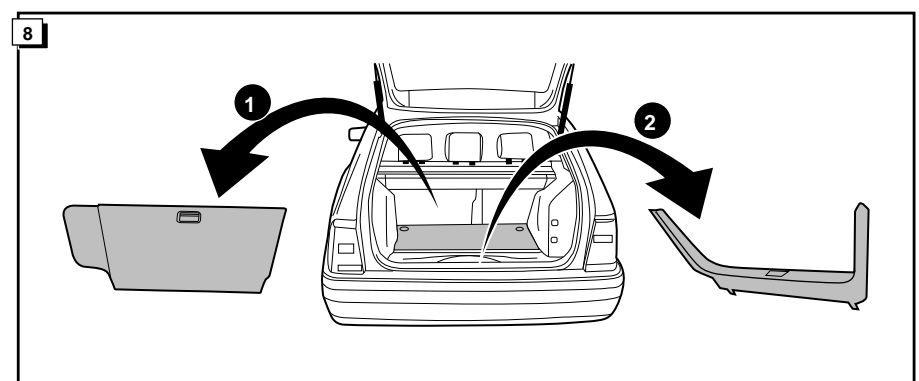

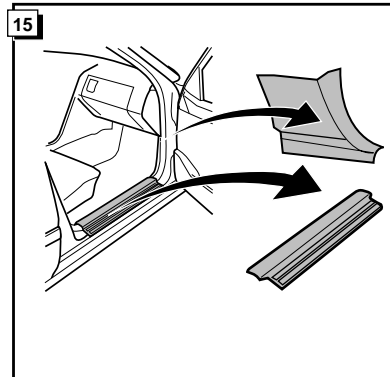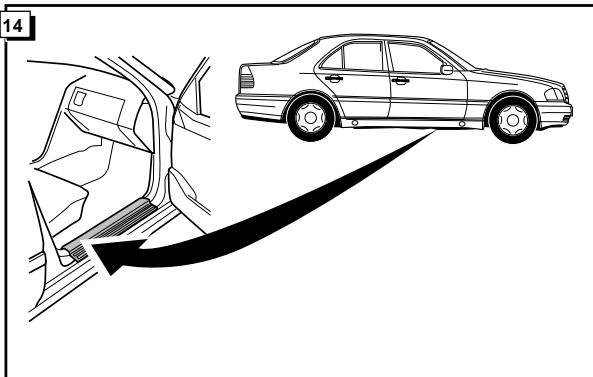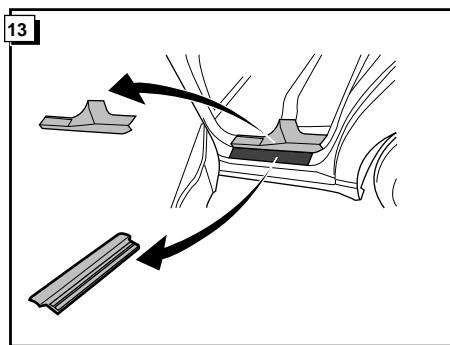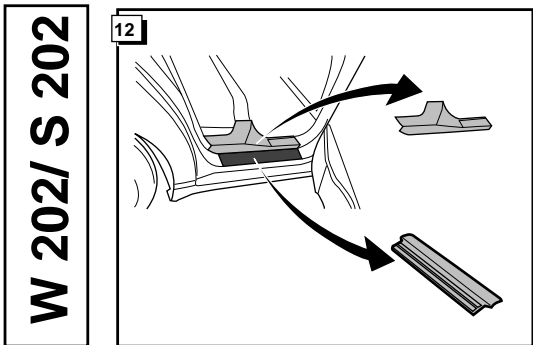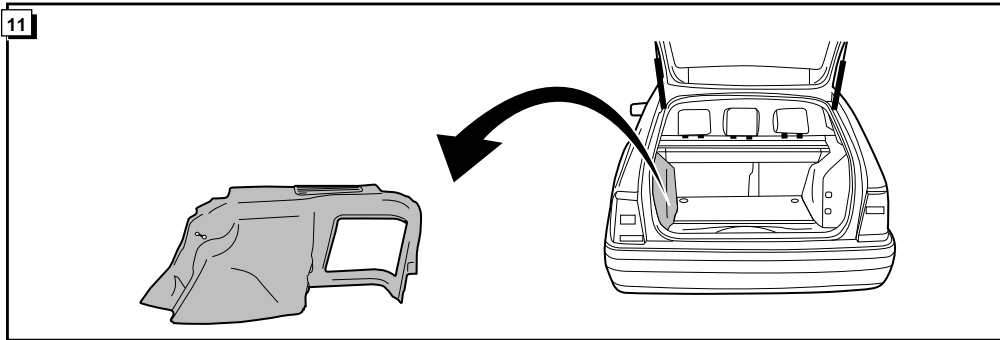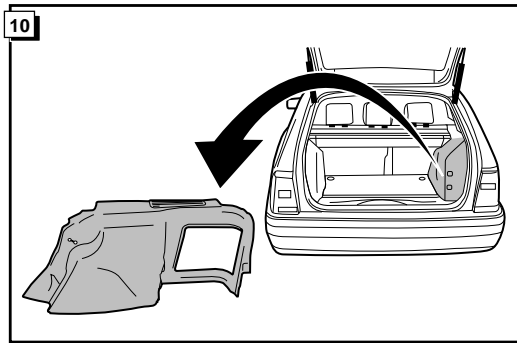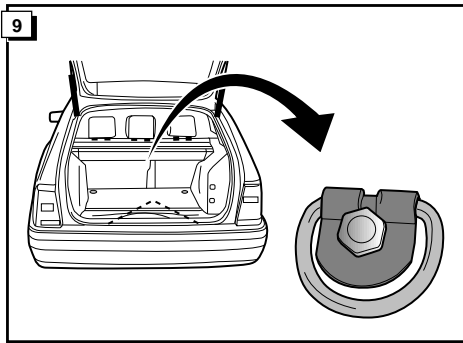

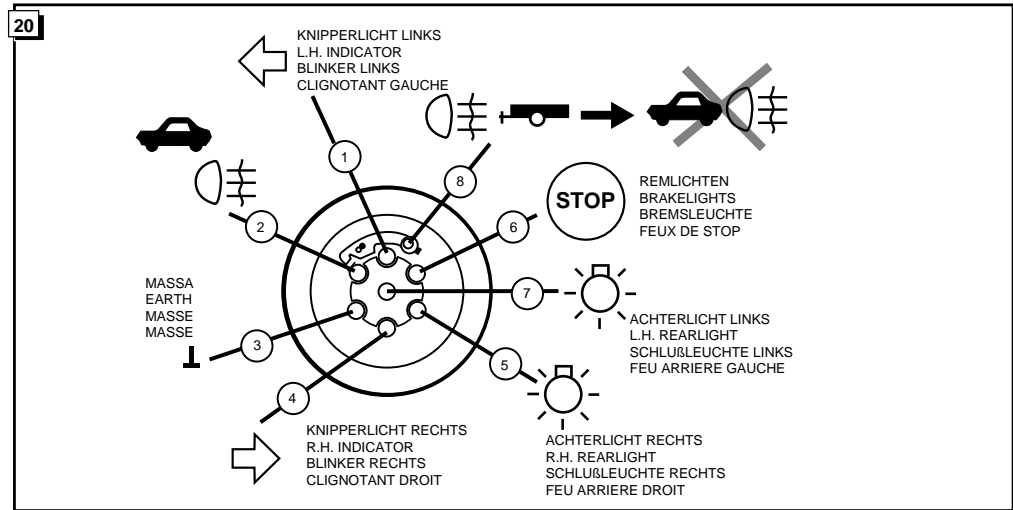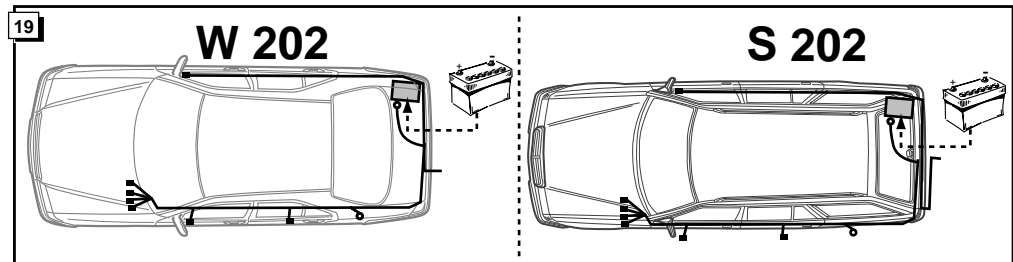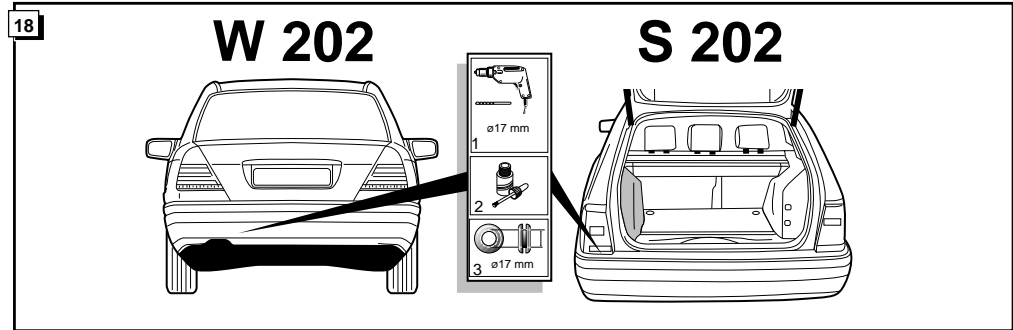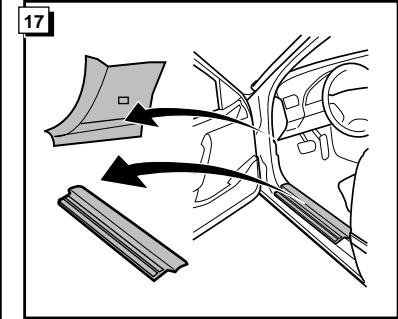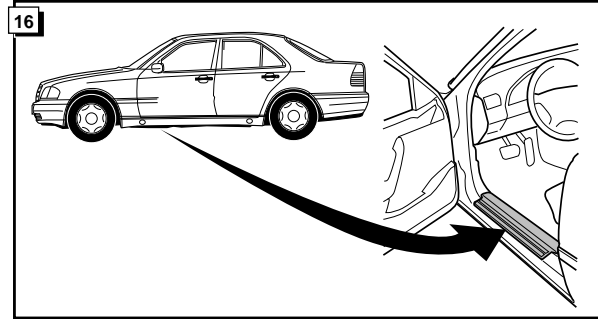


21

	NL	GB	D	FR
1 = L	GEEL	YELLOW	GELB	JAUNE
2 = 54-G	BLAUW	BLUE	BLAU	BLEU
3 = 31	WIT	WHITE	WEIß	BLANC
4 = R	GROEN	GREEN	GRÜN	VERT
5 = 58-R	BRUIN	BROWN	BRAUN	MARRON
6 = 54	ROOD	RED	ROT	ROUGE
7 = 58-L	ZWART	BLACK	SCHWARZ	NOIR
8 = 58-B	GRIJS	GREY	GRAU	GRIS

57



**!** CONTROLEER FUNCTIES !  
 CHECK FUNCTIONS !  
 FUNKTIONEN KONTROLIEREN !  
 CONTRÔLER LES FONCTIONS !

22

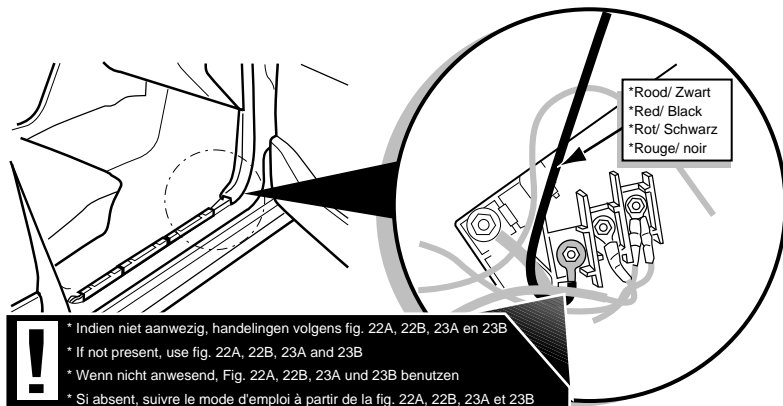

**!** \* Indien niet aanwezig, handelingen volgens fig. 22A, 22B, 23A en 23B  
 \* If not present, use fig. 22A, 22B, 23A and 23B  
 \* Wenn nicht anwesend, Fig. 22A, 22B, 23A und 23B benutzen  
 \* Si absent, suivre le mode d'emploi à partir de la fig. 22A, 22B, 23A et 23B


22A
















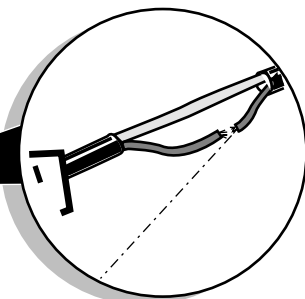
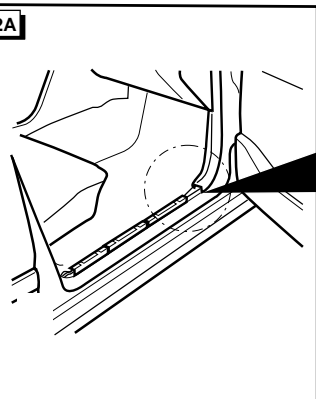









\*Rood/ Zwart  
 \*Red/ Black  
 \*Rot/ Schwarz  
 \*Rouge/ noir







22B

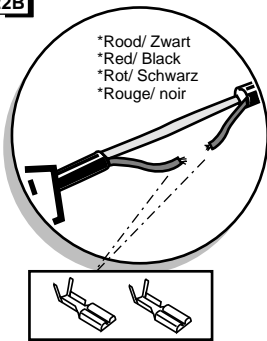

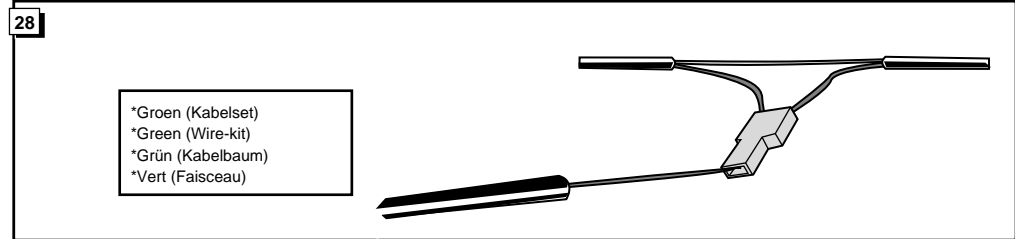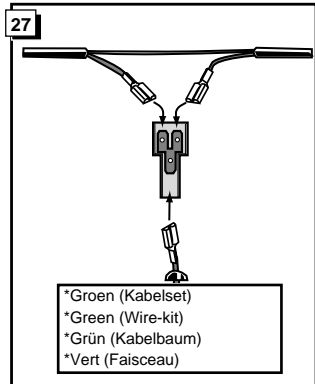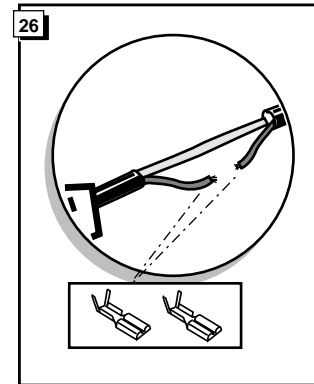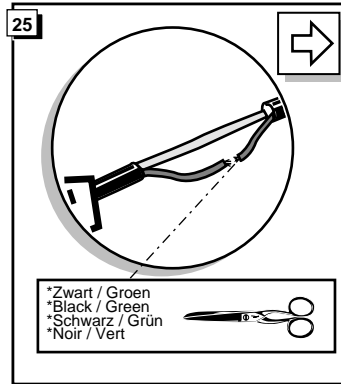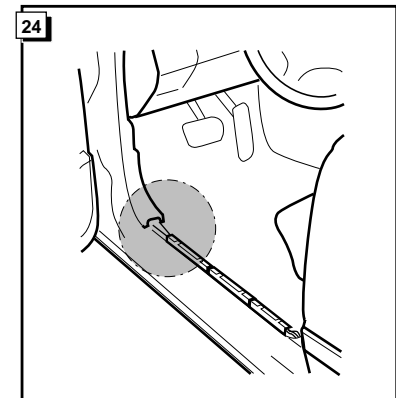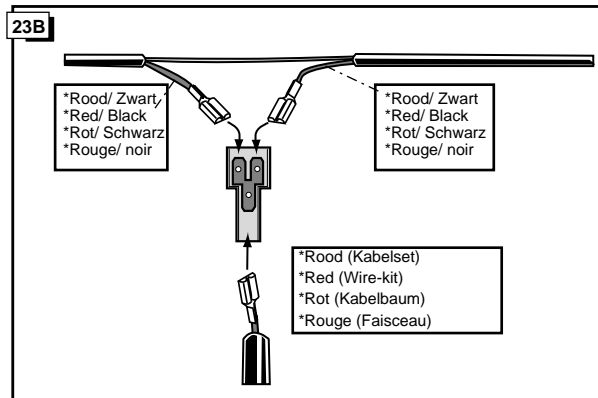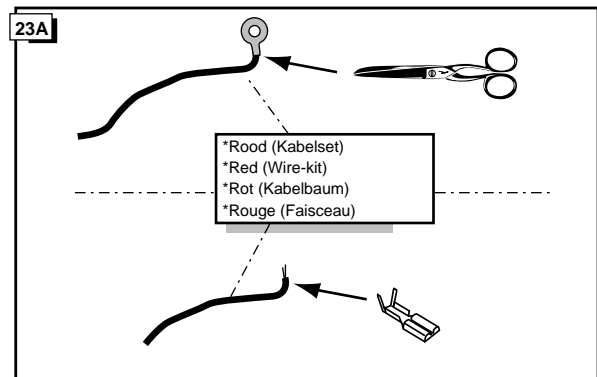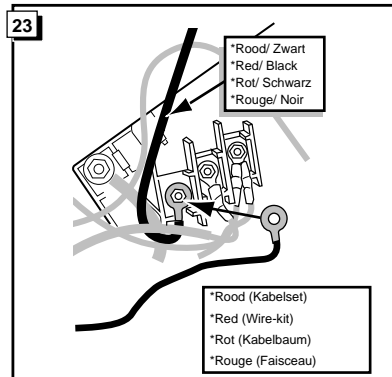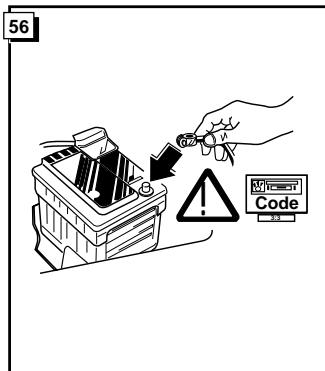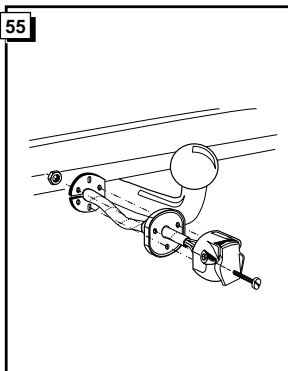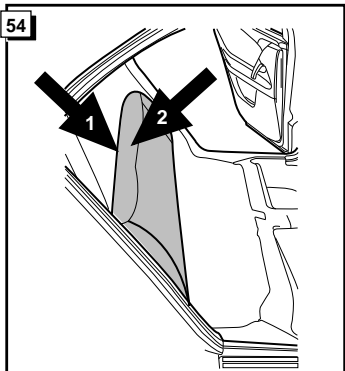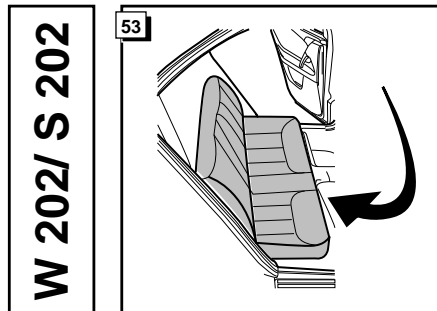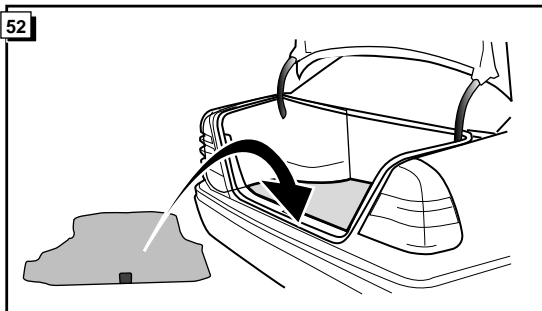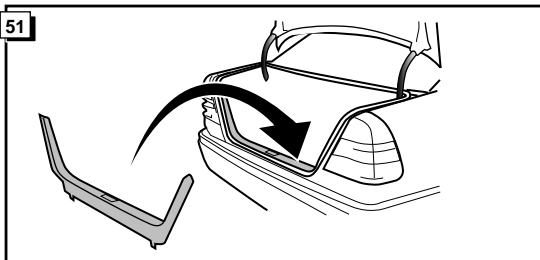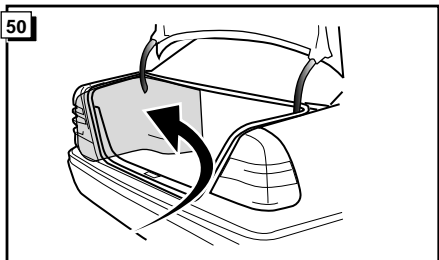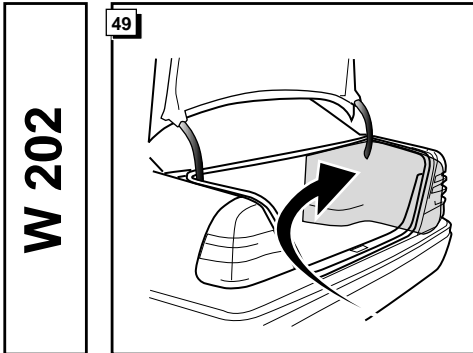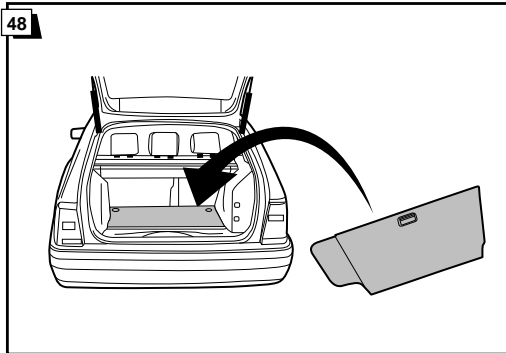

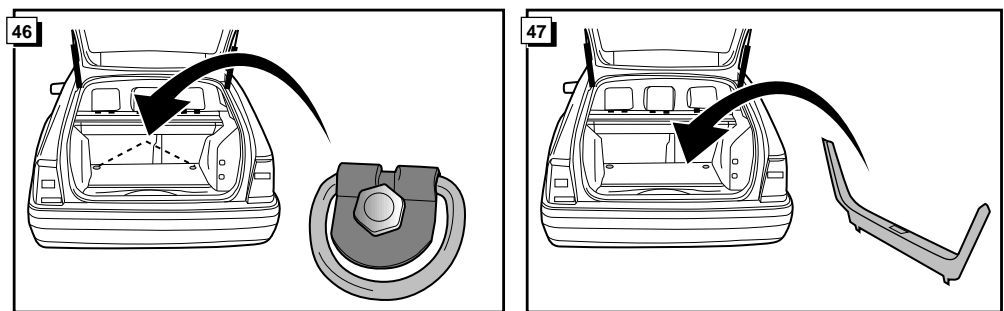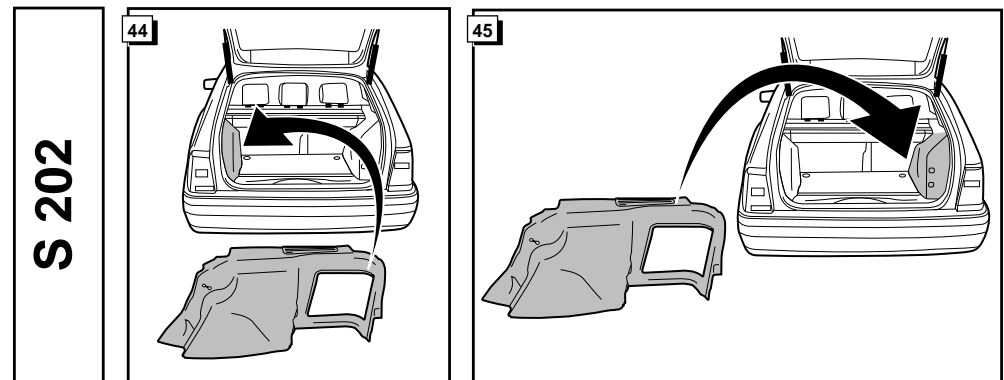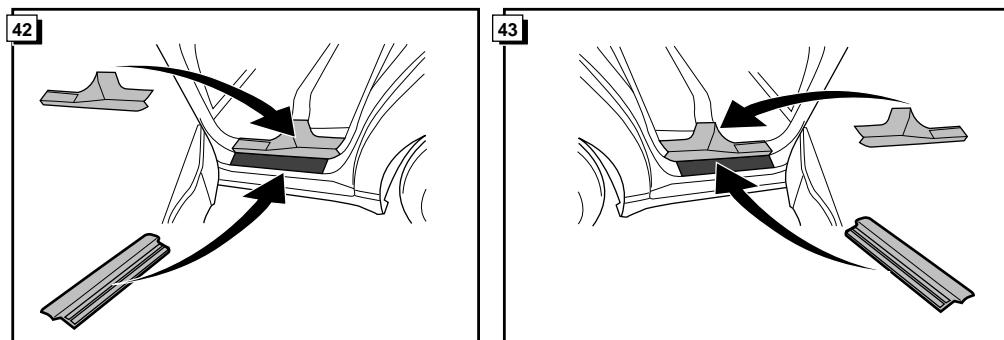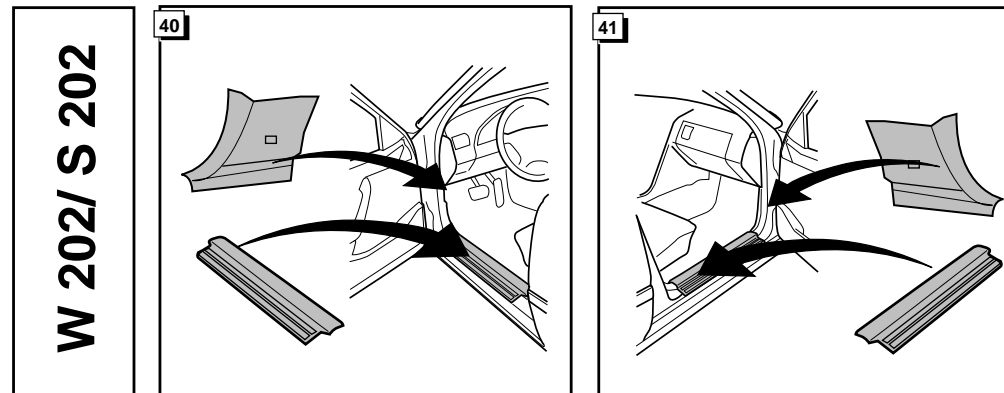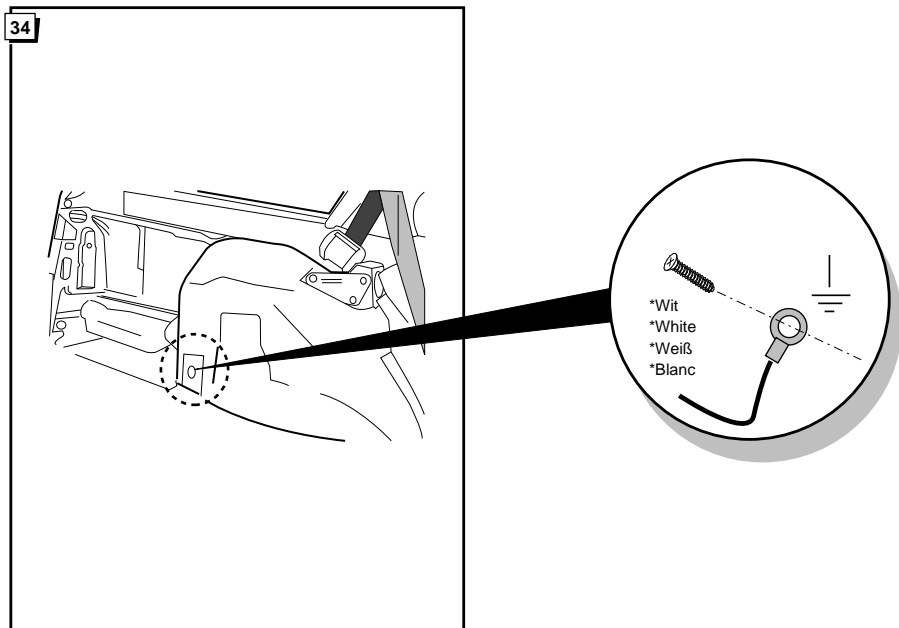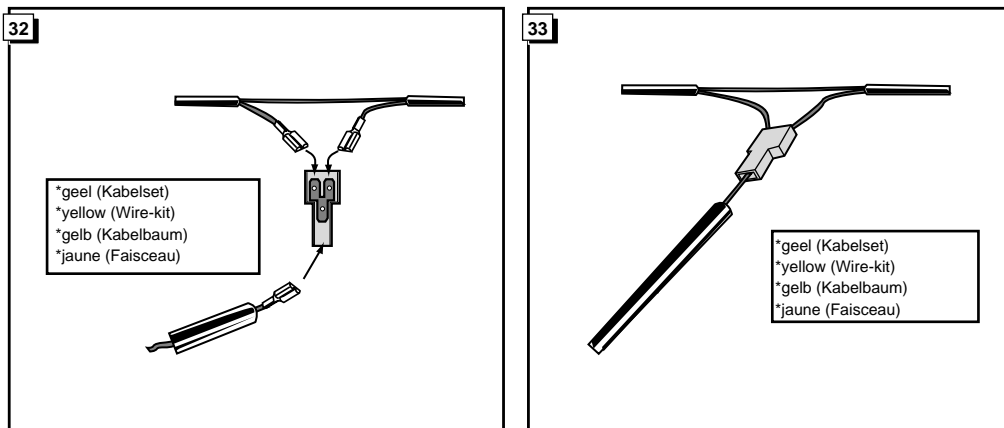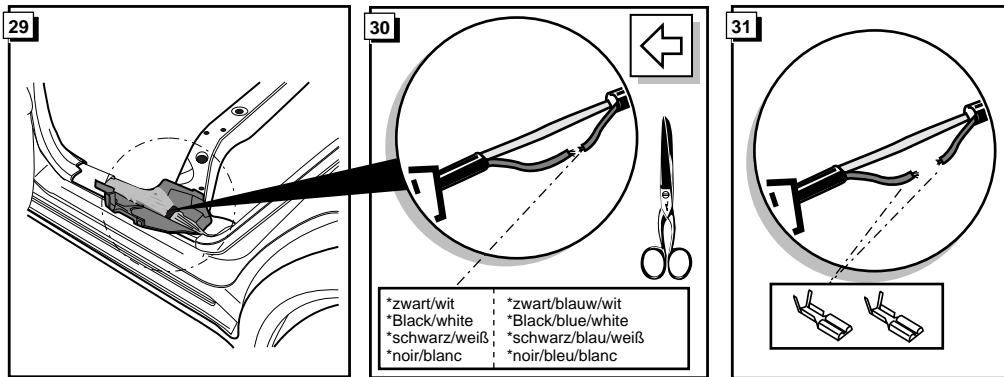



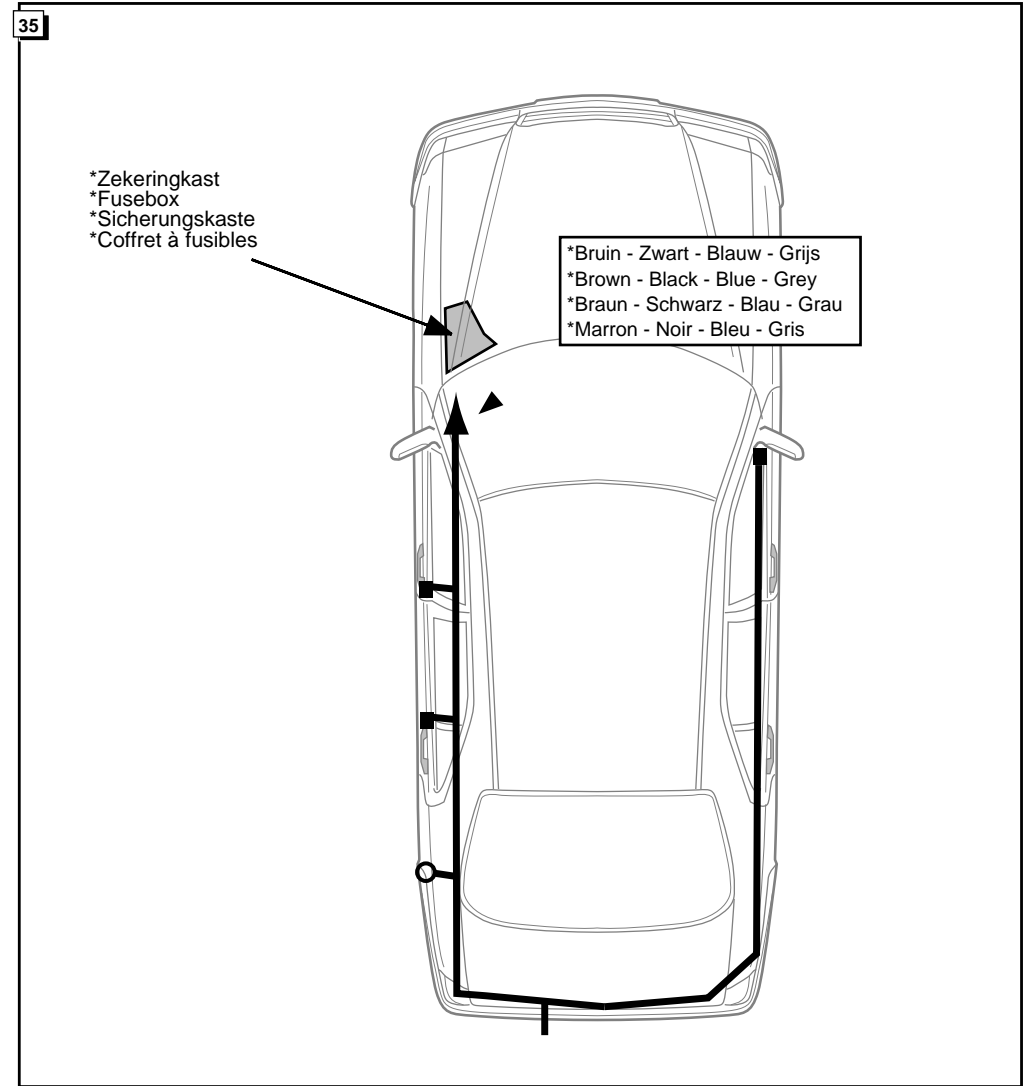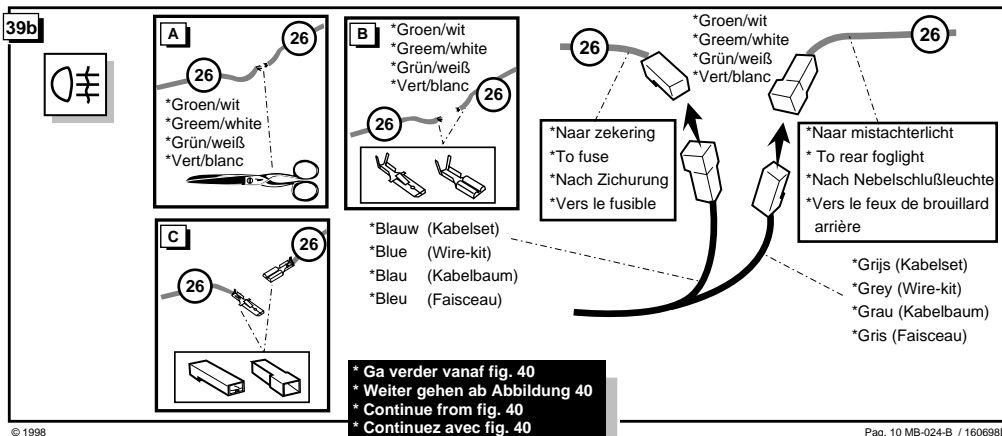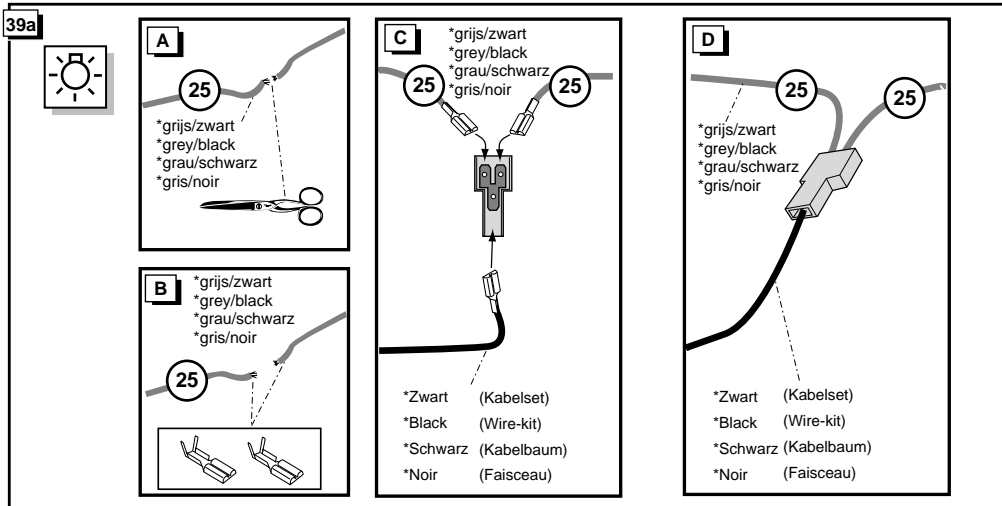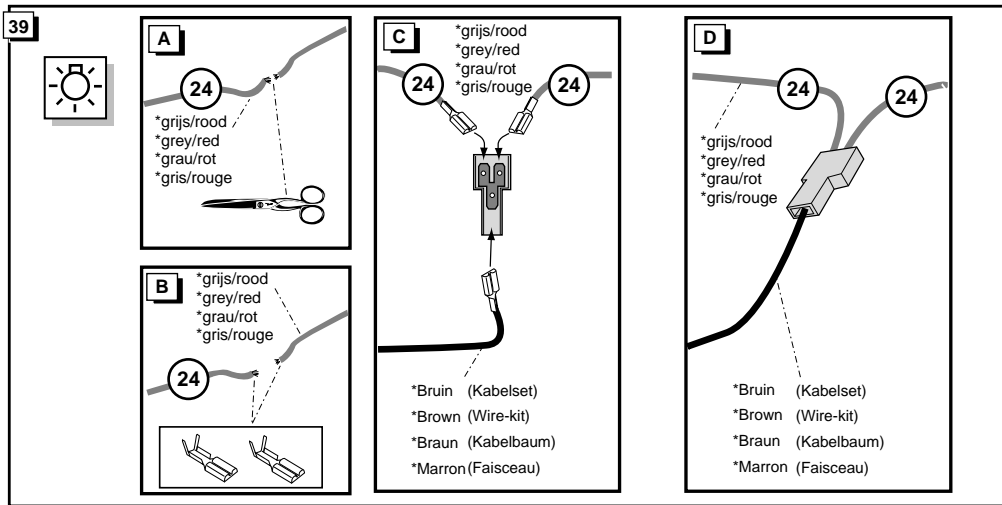

36	Kabelset-Wiring-harness-Kabelbaum-Faisceau		Zekering-Fuse-Sicherung-Fusible
Voor/before/vor/avant 12/94	Blauw-blue-blaue-bleu	grijs/groen-grey/green-grau/grün-gris/vert grijs/groen-grey/green-grau/grün-gris/vert grijs/zwart-grey/black-grau/schwarz-gris/noir grijs/rood-grey/red-grau/rot-gris/rouge	(28)
Zie-See-Sehen-Voir <b>37</b>	Zwart-black-schwarz-noir Bruin-brown-braun-marron		(28) (18) (24)
12/94 - 5/97	Blauw-blue-blaue-bleu	groen/wit-green/white-grün/weiß-vert/blanc grijs-grey-grau-gris grijs/zwart-grey/black-grau/schwarz-gris/noir grijs/rood-grey/red-grau/rot-gris/rouge	(17)
Zie-See-Sehen-Voir <b>38</b>	Zwart-black-schwarz-noir Bruin-brown-braun-marron		(17) (16) (15)
Na/after/nach/après 5/97	Blauw-blue-blaue-bleu	groen/wit-green/white-grün/weiß-vert/blanc grijs-grey-grau-gris grijs/zwart-grey/black-grau/schwarz-gris/noir grijs/rood-grey/red-grau/rot-gris/rouge	(26)
Zie-See-Sehen-Voir <b>39</b>	Zwart-black-schwarz-noir Bruin-brown-braun-marron		(26) (25) (24)

