


**Einbauanleitung Elektrosatz  
Anhängervorrichtung mit 13-P Steckdose  
lt. DIN/ISO Norm 11446**


**Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme  
DIN/ISO 11446 prise 13-P**

**Fitting instructions electric wiringkit  
towbar with 13-P socket up to  
DIN/ISO norm 11446**

**Montage-handleiding elektrokabelset voor  
trekhaak met 13-P contactdoos  
vigs. DIN/ISO norm 11446**

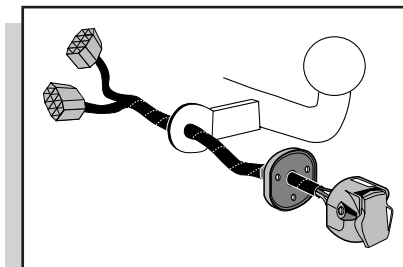

**HYUNDAI SANTA FE 2001-**

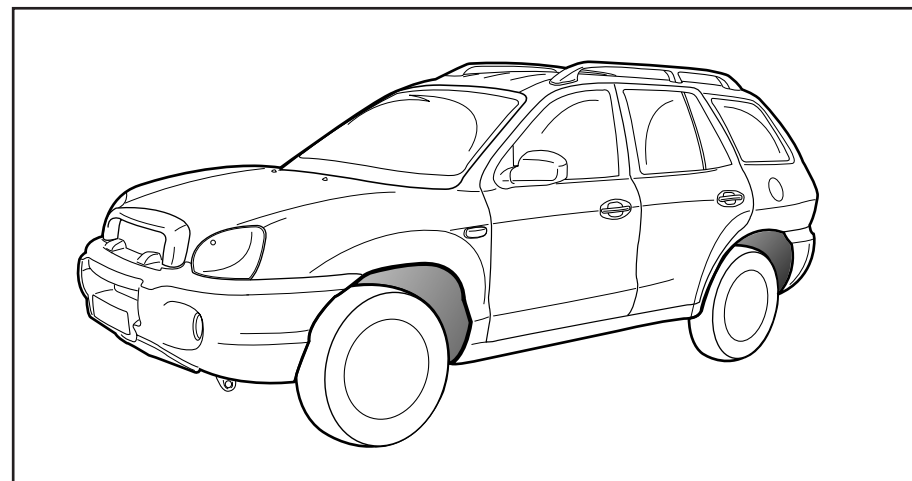














**Bestel Nr.: HY-017-DB**




\* Teilliste





\* Liste de pieces


\* Part list

\* Onderdelenlijst

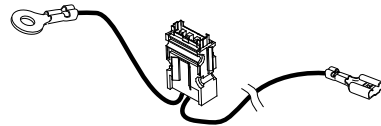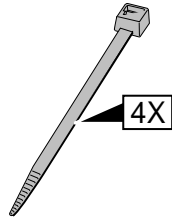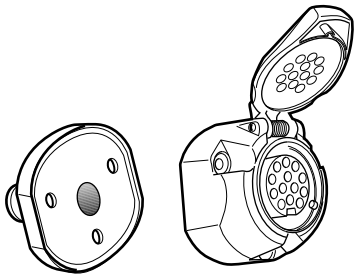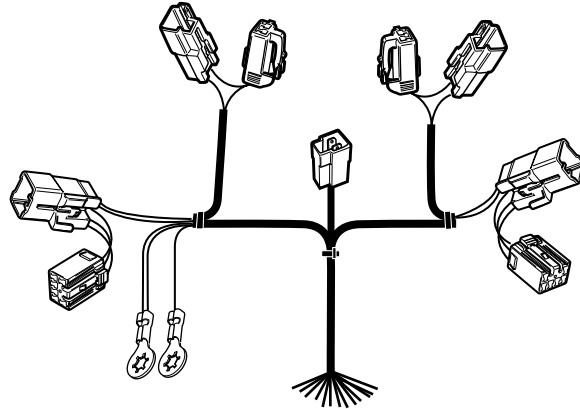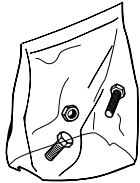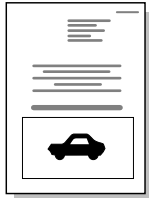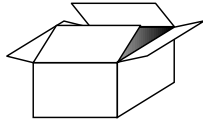


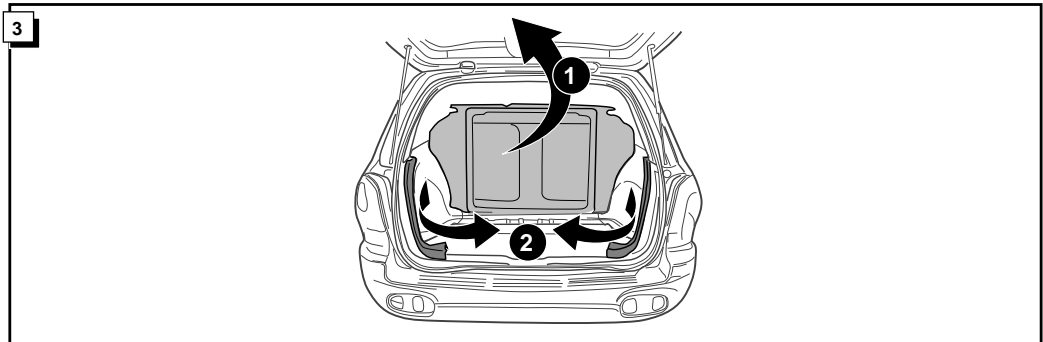
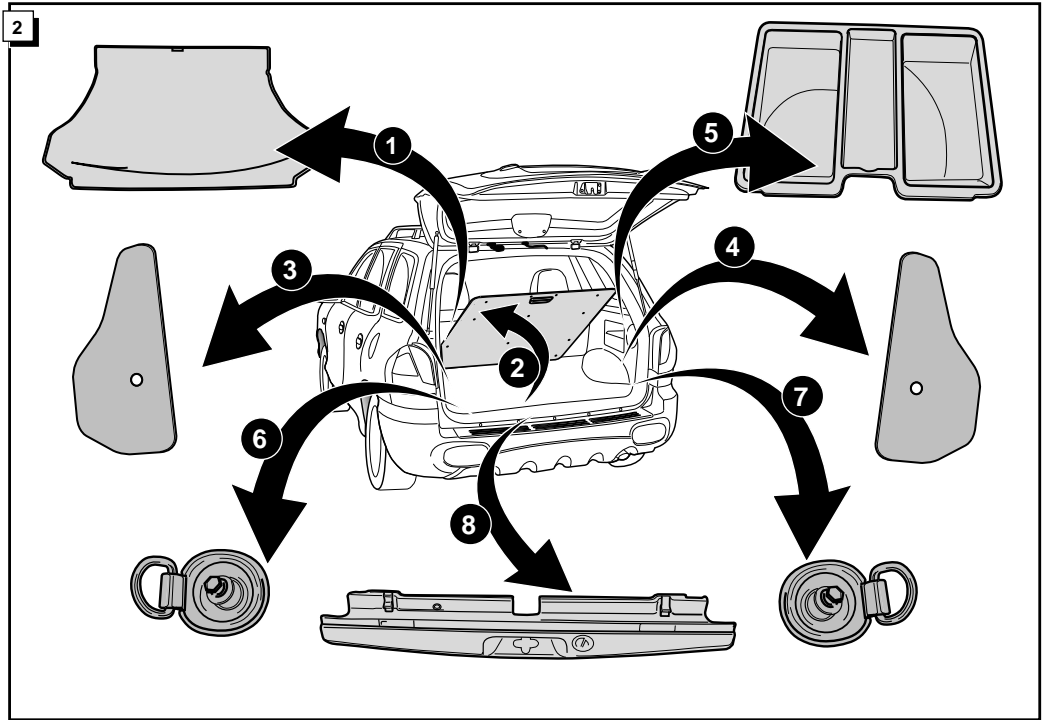
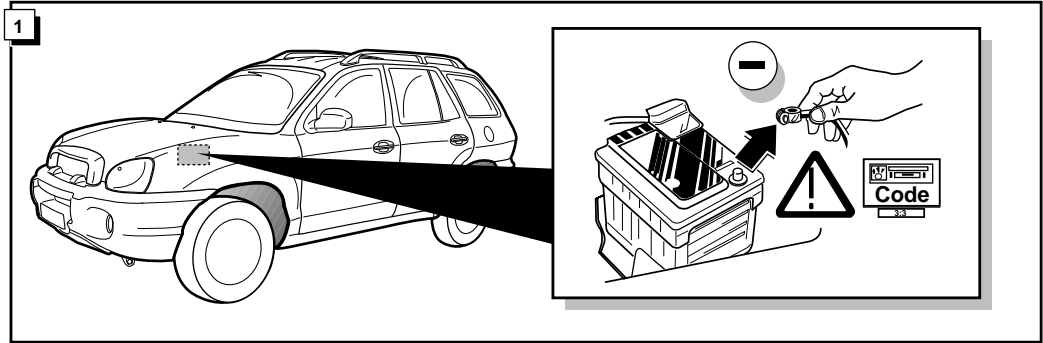


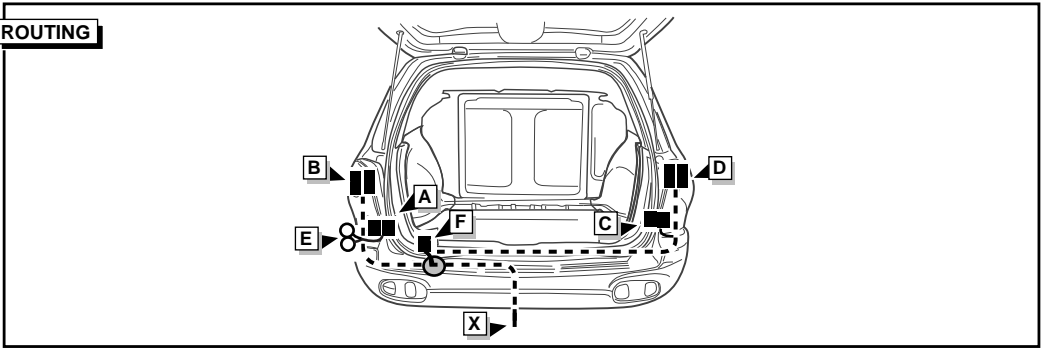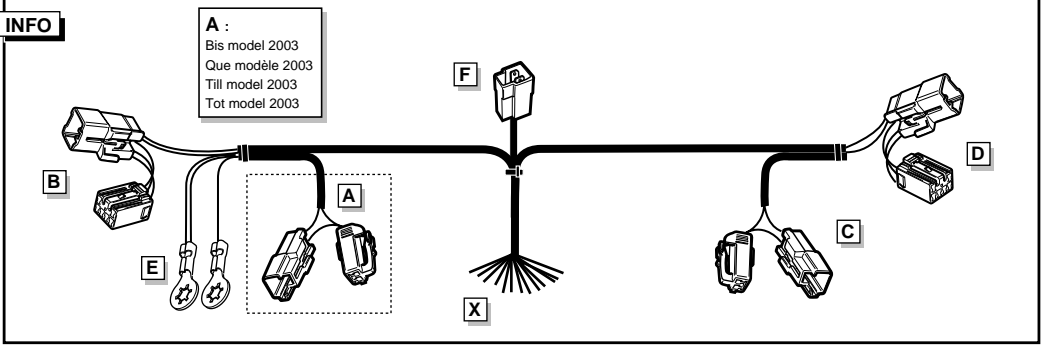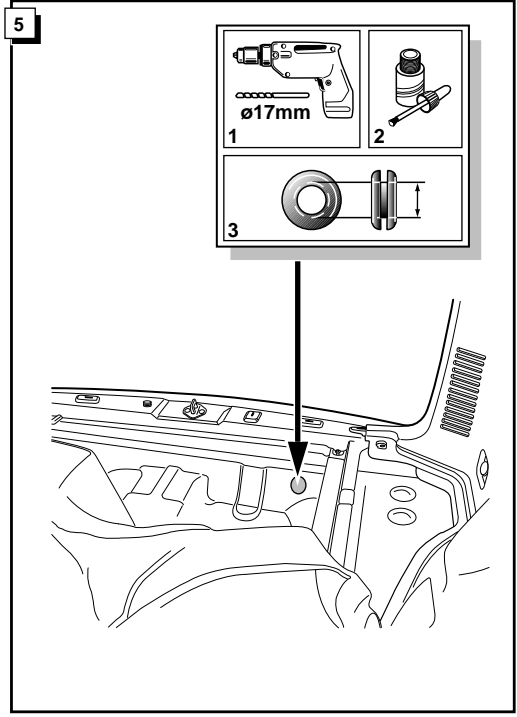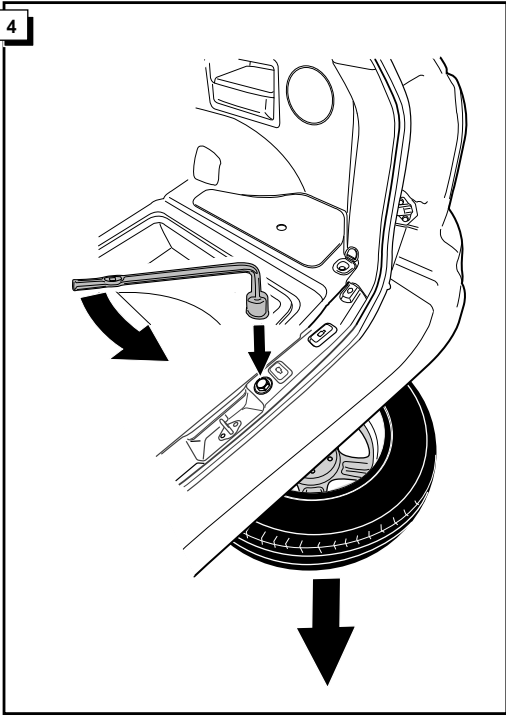

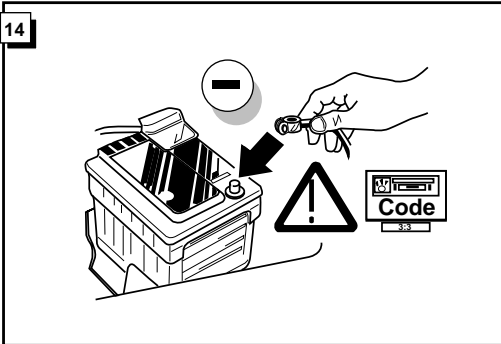


15

**FUNKTIONEN KONTROLLIEREN !**  
**CONTRÔLER LES FONCTIONS !**  
**CHECK FUNCTIONS !**  
**CONTROLEER FUNCTIES !**

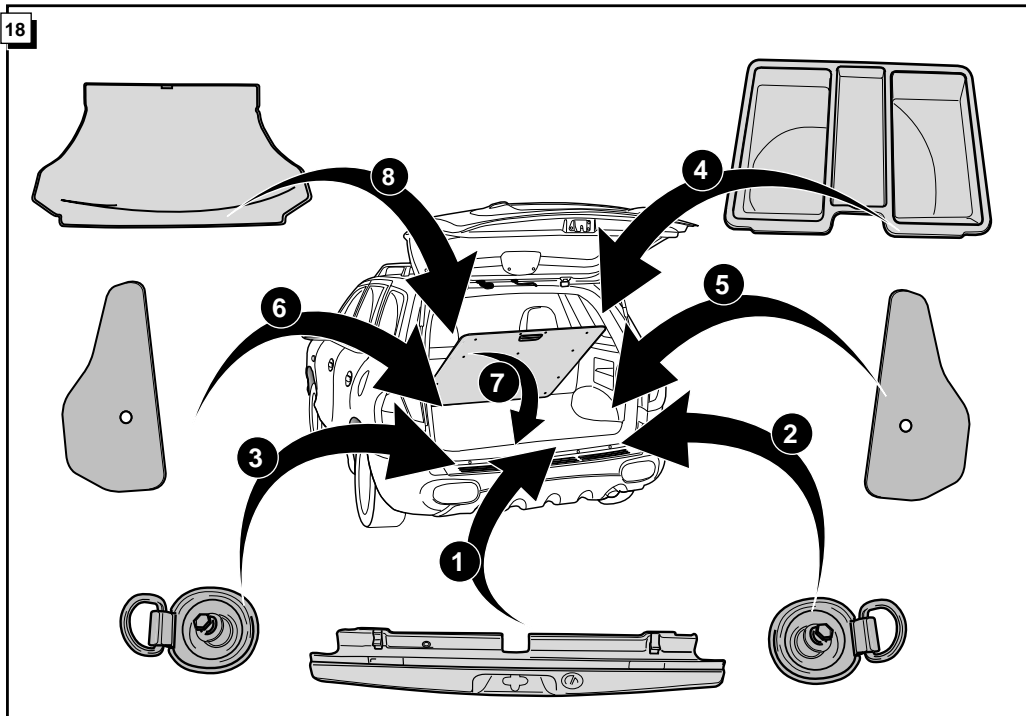
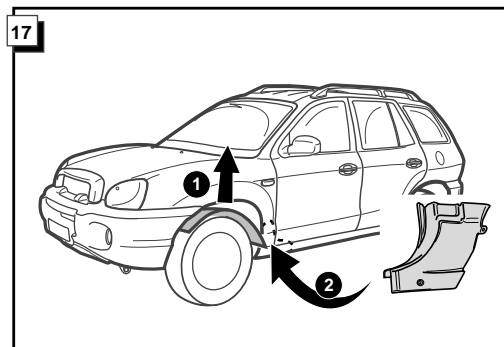
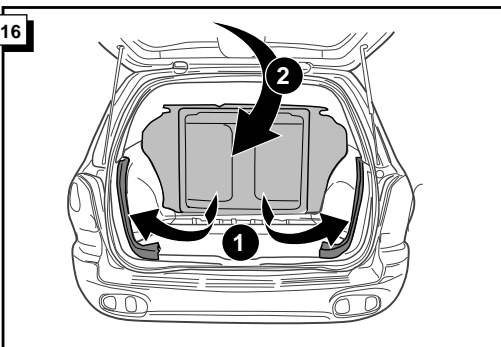
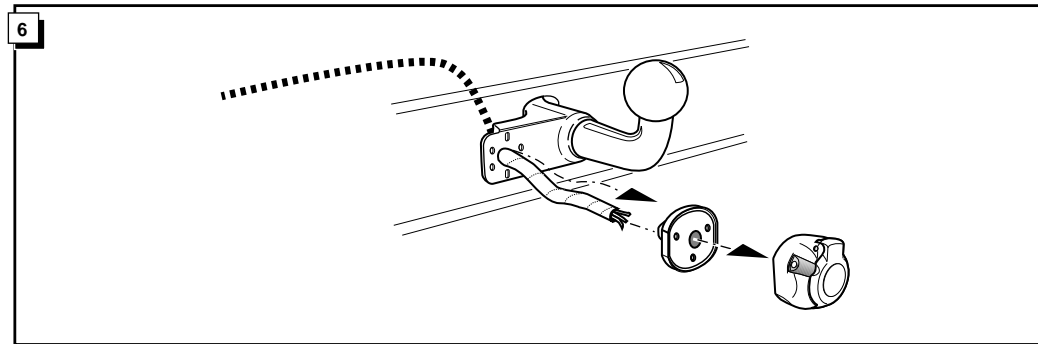


**INFO** Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting

DIN/ISO 11446	(D)	(F)	(GB)	(NL)	
1/L	gelb	jaune	yellow	geel	
2	blau	bleu	blue	blauw	
2a	grau	gris	grey	grijs	
1-8	weiß	blanc	white	wit	
4/R	grün	vert	green	groen	
5/58-R	braun	marron	brown	bruin	
6/54	rot	rouge	red	rood	
7/58-L	schwarz	noir	black	zwart	
Reverse	schwarz/rot	noir/rouge	black/red	zwart/rood	
30+	9	braun/weiß	marron/blanc	brown/white	bruin/wit
15+	10	rot	rouge	red	rood
11	weiß	blanc	white	wit	
12	rot/blau	rouge/bleu	red/blue	rood/blauw	
13	weiß	blanc	white	wit	

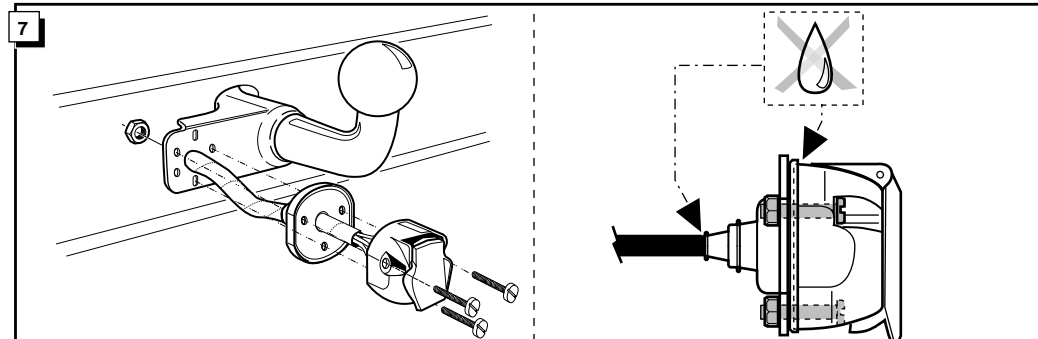


8

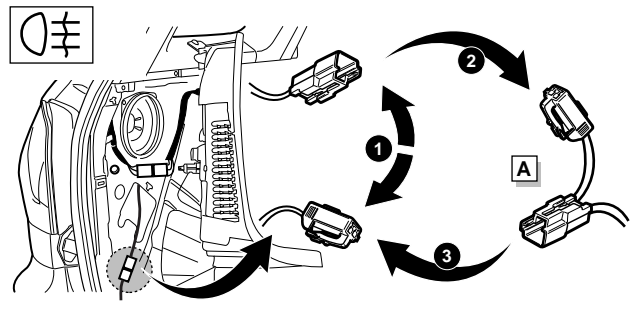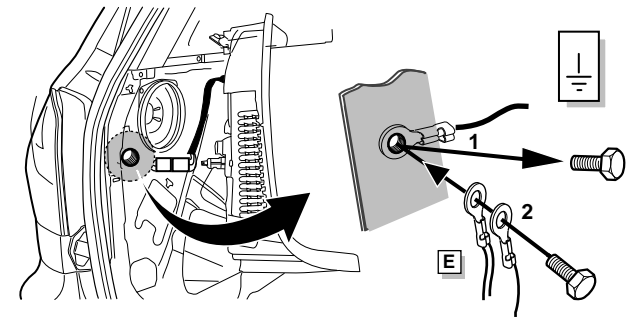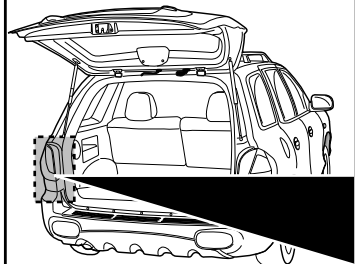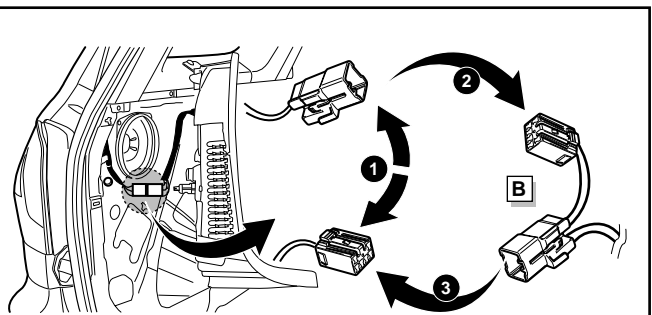


**A :**  
 Bis model 2003  
 Que modèle 2003  
 Till model 2003  
 Tot model 2003


9

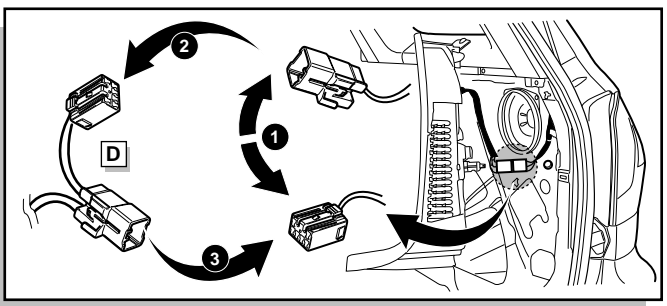


10

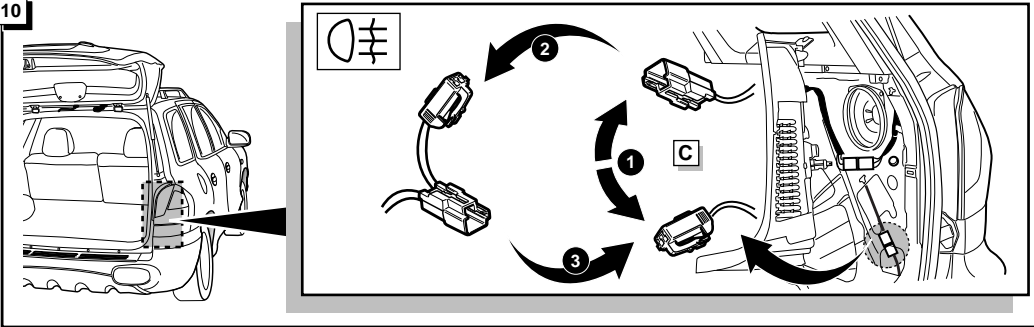


11

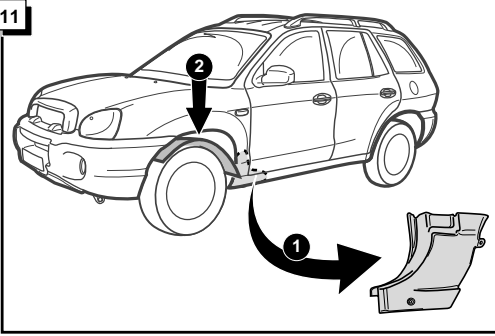

**ROUTING**

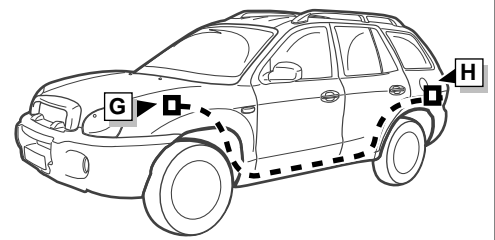

12

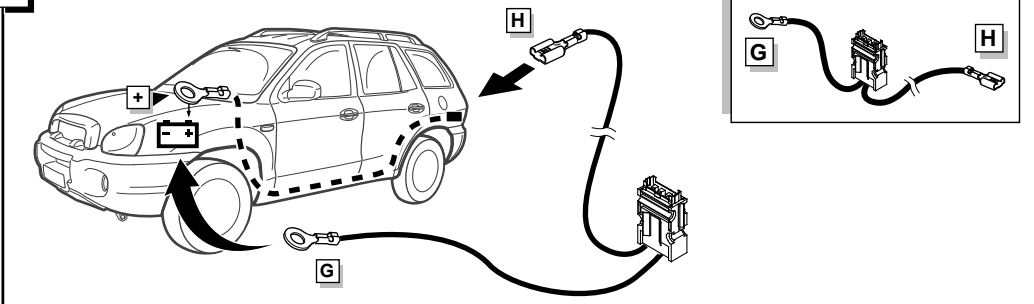

13

