


**Einbauanleitung Elektrosatz  
Anhängervorrichtung mit 12-N Steckdose  
lt. DIN/ISO Norm 1724**


**Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme  
DIN/ISO 1724 prise 12-N**

**Fitting instructions electric wiringkit  
towbar with 12-N socket up to  
DIN/ISO norm 1724**

**Montage-handleiding elektrokabelset voor  
trekhaak met 12-N contactdoos  
vlg. DIN/ISO norm 1724**

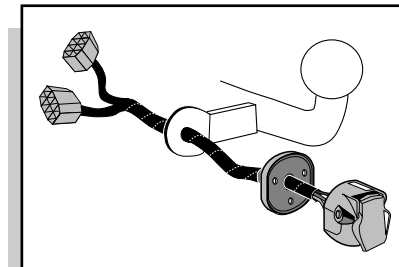

SKODA SUPERB 2002-

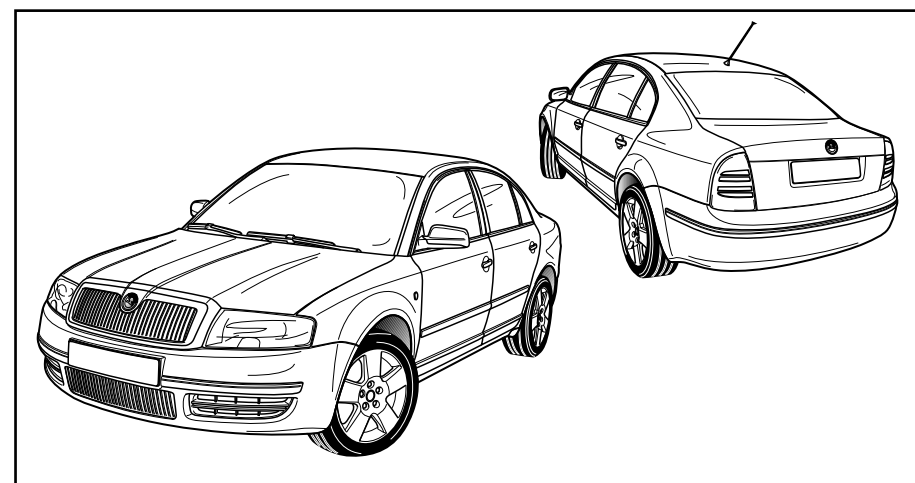



Bestel Nr.: SK-004-BB

\* Teilliste


\* Liste de pieces

\* Part list




\* Onderdelenlijst



2x

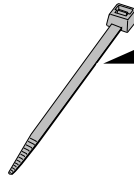


2x

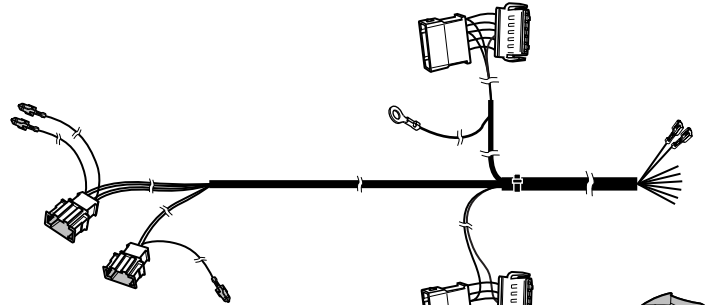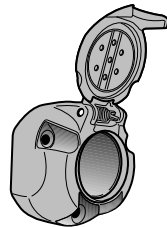

6x




1x



1x



1x




1x




1x







3x













3x



6x

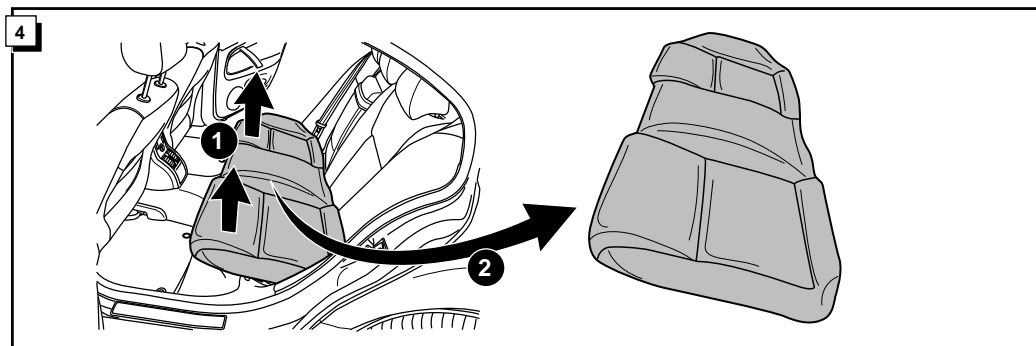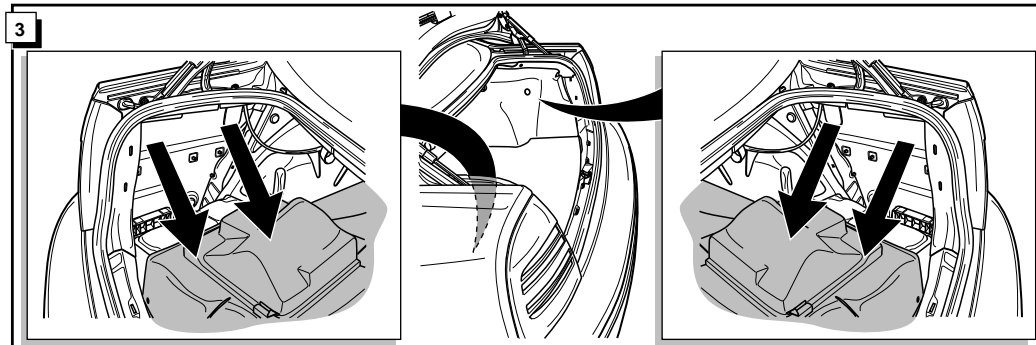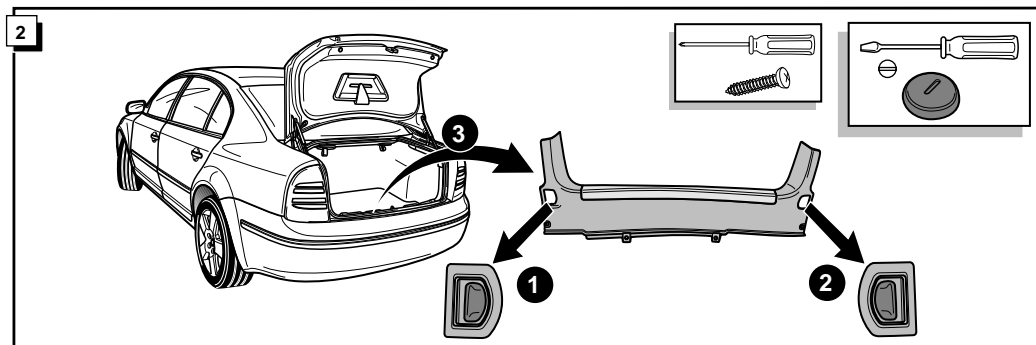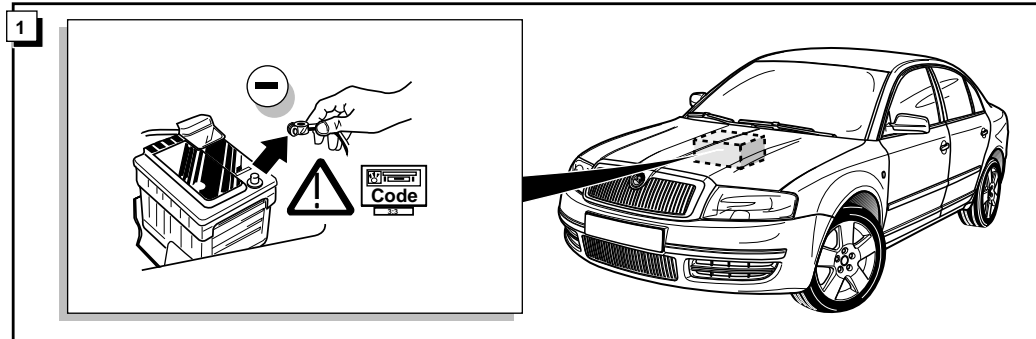

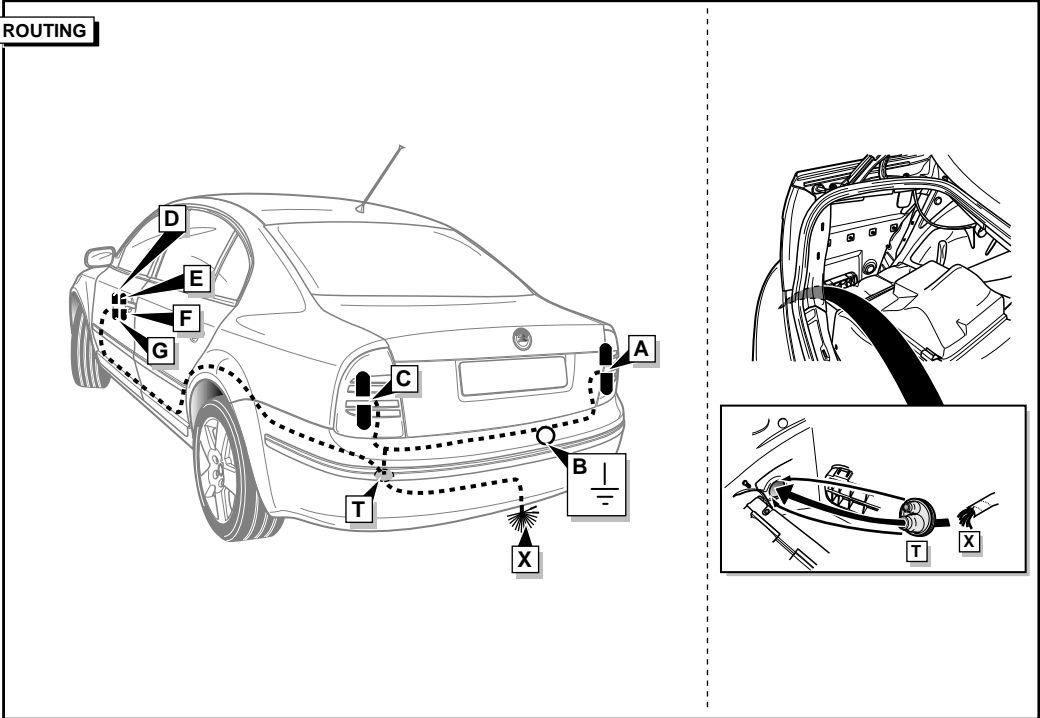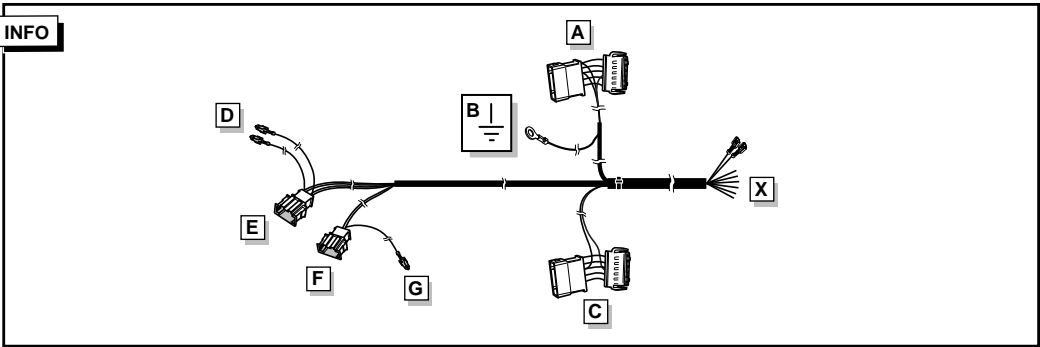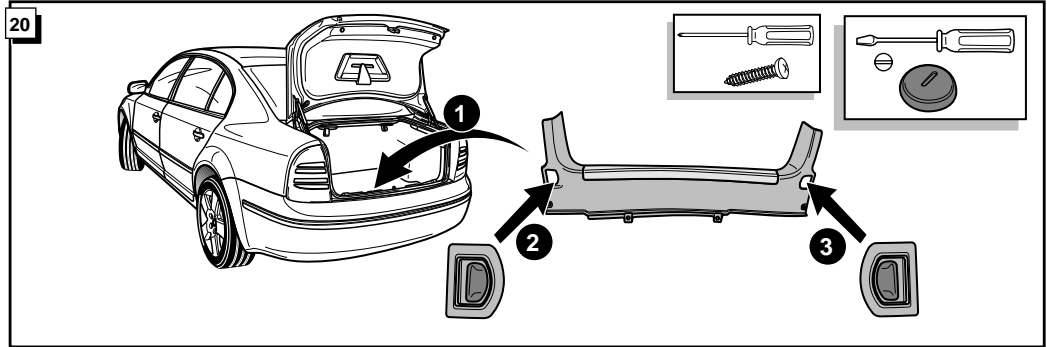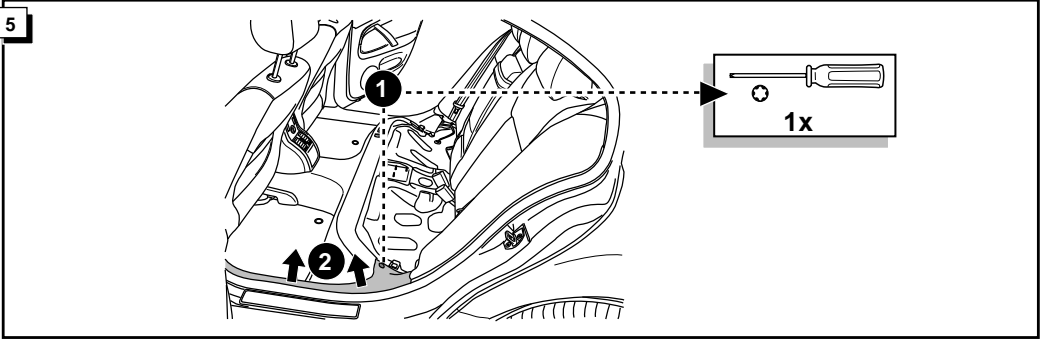

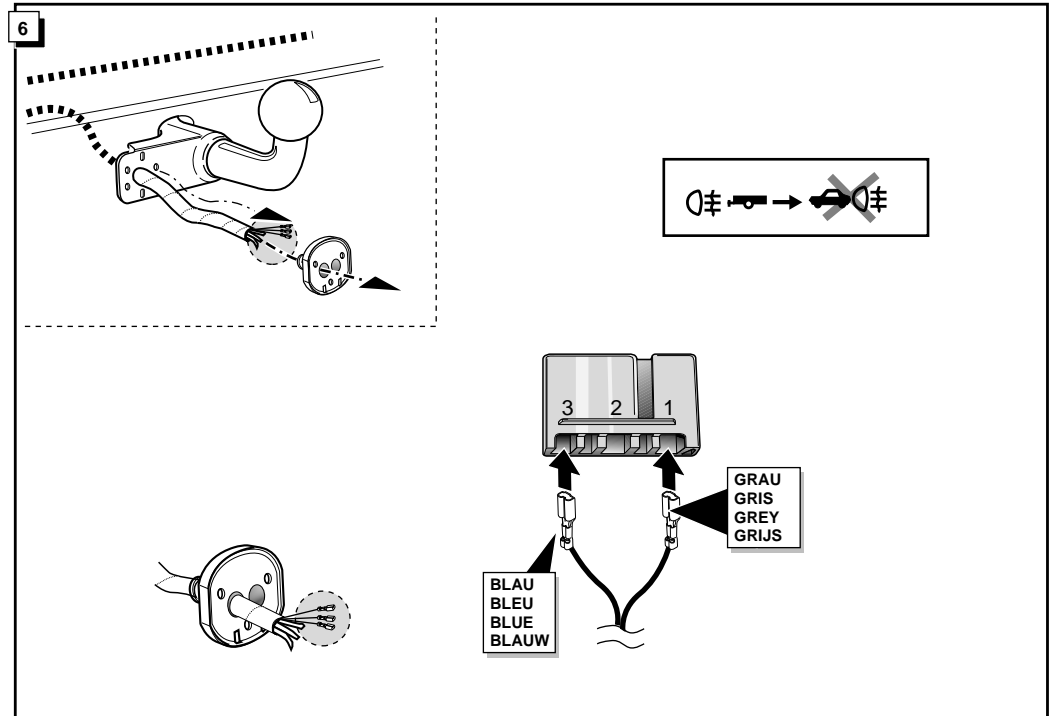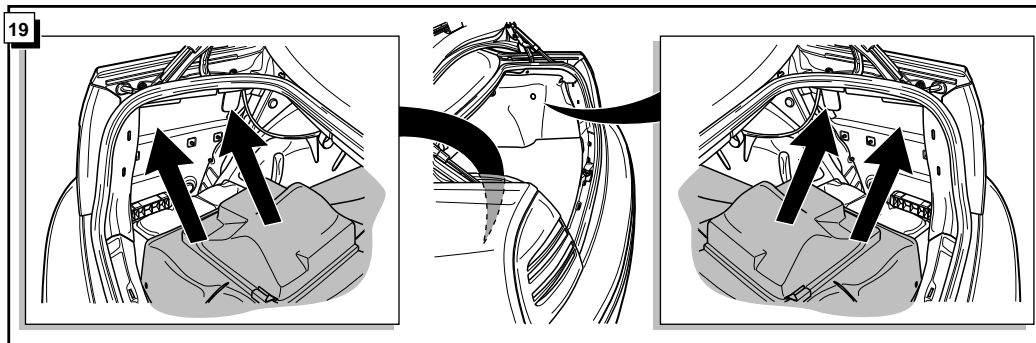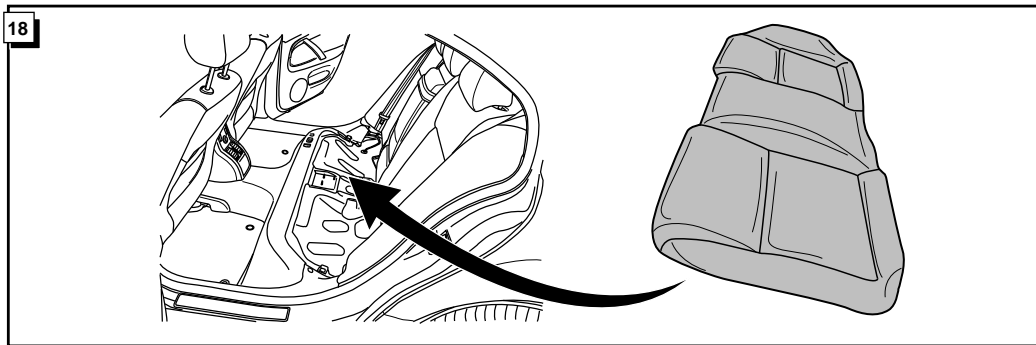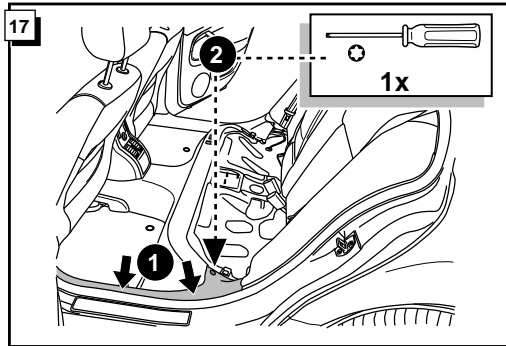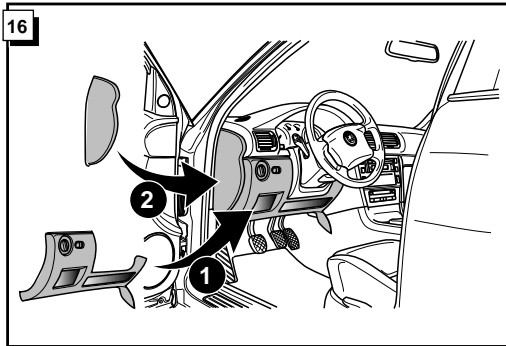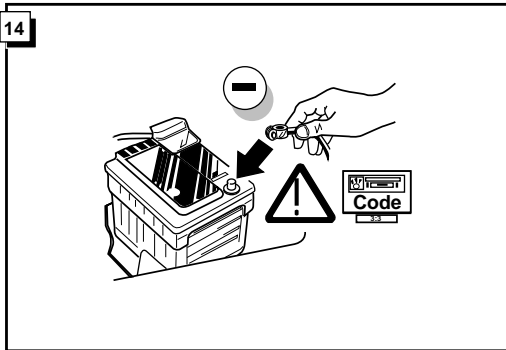

7 **Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting**

INFO						
DIN/ISO 11446	(D)	(F)	(GB)	(NL)	P <sub>max</sub>	
↶	1/L	gelb	jaune	yellow	geel	21W
↷	2	blau	bleu	blue	blauw	2x21W
⏏	1-8	weiß	blanc	white	wit	
↷	4/R	grün	vert	green	groen	21W
☀	5/58-R	braun	marron	brown	bruin	52W
STOP	6/54	rot	rouge	red	rood	3x21W
☀	7/58-L	schwarz	noir	black	zwart	52W

